

USER'S MANUAL CHILDREN FOUR WHEEL ELECTRIC CAR TY327671

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com











Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

Please read all instructions carefully and keep it for future reference.

Warnings:

Attention! Use it with protective equipment.

Attention! Not use it in the traffic.

Attention! The product is not suitable for the children under 3 years.

General Warnings:

- ⚠ The product must be installed and used under the supervision of an adult.
- A Read through each step carefully and follow the proper order.
- A Remove all packaging, separate and count all parts and hardware.
- ⚠ Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.
- \triangle We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- \triangle Ensure a secure surface during construction, und place the product always on a flat, steady and stable surface.
- \triangle Please use the product carefully, as the product requires great skill, avoid accidents by the user or others, by fall or collision.
- \triangle Please wear suitable protective equipment during use, e.g. protective helmet, gloves, knee pads, elbow pads etc.



- Simulation Car Series
- Colorful Light and Wounderful Music
- Forward&Backward
- Power Display.MP3 Function

Please read the operating instrucitons carefully before using.


For your first time using the vehicle, must be sure charge the product about 12 hours, otherwise maybe damge the battery.

Once using the battery car, couldnot make the battery depleted.

Specifications Introduction:


Item Name	Specifications		
Battery	6V7AH		
Motor	Drive motor 6V390x1(18000RPM) Steering motor 6V380x1(6000RPM)		
Suitable Age	37-95 Months		
Max Load	55lbs		
Size of Car	43.5" x 27" x 20.5"		
Speed	3-5KM/H		
Using Time	Charging 8-12 Hours, Using 1-2 Hours		
Charge	Input: 100-120VAC Output: 6V500MA		
Battery of RC	AAA1.5Vx2 (not provided)		

The data here are only for reference and the samples of each type shall apply.

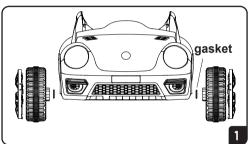

1.Front Wheel Assembly

Fit the gasket, wheel onto the front axle, fit the wheel cover into the wheel.

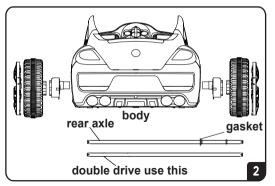


2.Rear Wheel Assembly

(1WD): Fit the motor, wheel driver on to the rear axle. Fit the wheel cover into the wheel.


(2WD): Fit the motor, wheel driver on to the rear axle. Fit the wheel cover into the wheel.

Repeat for the other side.

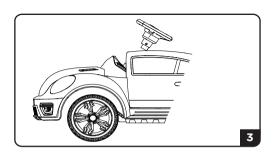


3.Steering wheel:

Insert the steering wheel into the end of the steering shaft, connect the music connector and power connector, insert the screw and tighten it.

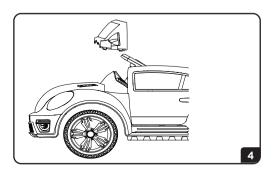


4.windshield and mirror:

Put the wind frame to relevant position. When hearing the clicking sound, means connected.

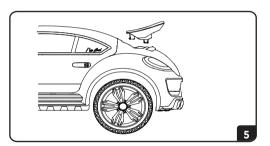


5.Tail Assembly:

Put the tail to relevant position. When hearing the clicking sound, means connected.

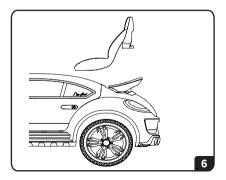

6.Seat Assembly:

Remove two screws, fit the seat cover into the vehicle body, insert with just two screws into it and tighten.

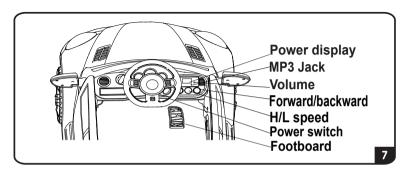


7. The dashboard:

a:Rc-Manual Function

Open the power switch, the light is open, press the "forward-back" switch to "forward" position, press the "foot pedal", the vehicle will drive forward; press the "forward-back" switch to "back" position, press the "foot pedal", the vehicle will back up; if loosen the foot pedal, the car will stop.

b:Light Function

Click the horn switch, the car will "baba", click the music switch, the car will start playing music.

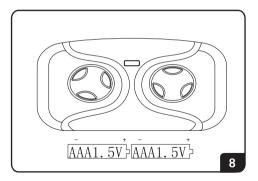


8. Remote control battery:

Open the remote control's battery cover, put two AAA1.5V batteries (not included) according to the indicated direction of the "+/-", then put on the battery cover. tighten the screw. (if you want to update the battery. must do by adult)


Do not mix old and new batteries.

 Do not mix old and new batteries.
 Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium). Insert batteries as indicated inside the battery compartment.
 Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage this product. Dispose of batteries safely.

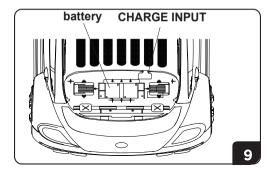

9. Charging the Battery:

Turn the power to off. please charge in time. The charge input is under the seat

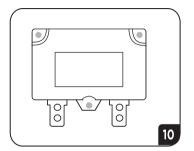

When the vehicle won't work or can not be charged, please check the fuse first and see whether it is burnt out If the fuse is broken, please change with a new one, there is a spare fuse in the fuse package. The fuse is under the seat

Part list Part Diagram _____

No.	Part Name	Diagram
1	Wheel cover	
2	Motor	
3	Windshield	
4	Seat	
5	Steering wheel	
6	Front wheel	
7	Rear wheel	
8	Tapping screw	(>
9	Rear axle	
10	Gasket	0
11	Steering rod	<u></u>
12	Nut	
13	Screw	{
14	Charger	
15	Remote control	

Rules for Safe Riding:

READ THESE RULES ALOUD TO YOUR CHILD AND THEIR PLAYMATES AND MAKE SURE THEY UNDERSTAND THEM!

- Keep Children within Safe Riding Areas:
- Never use in roadway, near motor vehicles, on lawn space, on or near steep inclines or steps, swimming pools or other bodies of water:
- Use the toy only on flat surfaces. such as inside your house, garden or playground.
- Never use in the dark. A child could encounter unexpected obstacles and have an accident. Operate the vehicle only in the daytime or a well-lit area.
- It is not recommended to drive the vehicle on wet surfaces or on lopes of greater than 15 degrees.
- Do not use this vehicle outdoors when it is raining or snowing.
- Make sure you come to a complete stop before changing directions from forward to back.
- Please follow the correct weight and age limits allowed to drive this vehicle.
- It is prohibited to change the circuit or add other electric parts
- Inspect wires and connections of the vehicle periodically.
- In order to avoid accidents, please ensure the vehicle is safe before riding.
- Do not let any child touch the wheels or be near them when the car is moving .

Note and Caring for Your Vehicle:

- •When encounter the obstacle, the car would be stopped, please leave that then ridding.
- •Do not use indoor, in case of damaging to furniture or even a child fall.
- •Overage and overload is forbidden. Maximum load: 55 lbs .
- •Turn off the power when not in use; unused for long periods of time, please unplug the power connection wires.
- The product images.functions.introduction details are only for reference, to prevail in kind.

Caring for Your Vehicle

- 1) Always check and maintain your vehicle in order to ensure your baby's safety.
- 2)Check all the spare parts whether are completed before assemble the car. If missing, contact with us freely .
- 3) Check regularly whether the screw is loose, the components are not damaged.
- 4)Regular clear the product, note the electric elements are not damaged.
- 5)Disassembly the product according to the guide book carfully.
- 6)Regular checking the product and charge, electric wire connection, car body and other details. Once found anything damaged, repair or replace successfully then use again.

MAINTAINING:

- It is parents' responsibility to check main parts of the toy before using, Must regularly examine for potential hazard, such as the battery, charge, cable or cord, plug, screws are fastening enclosure of other parts and that in the event of such damage, the toy must not be used until that damage had been properly removed.
- Make sure the plastic parts of the vehicle are not cracked or broken.
- · Occasionally use a lightweight oil to lubricate moving parts such as wheels.
- Park the vehicle indoors or cover it with a tarp to protect it from wet weather.
- Keep the vehicle away from sources of heat, such as stoves and heaters. Plastic parts may melt.
- Recharge the battery after each use. Only an adult can handle the battery. Recharge the battery at least once a month when the vehicle is not being used.
- Do not wash the vehicle with a hose. Do not wash the vehicle with soap and water. Do not drive the vehicle in rainy or snowy weather. Water will damage the car. electric system and battery.
- Clean the vehicle with a soft, dry cloth. To restore shine to plastic parts, use a non-wax furniture polish. Do not use car wax. Do not use abrasive cleaners.
- Do not drive the vehicle in loose dirt, sand or fine gravel which could damage moving parts, motors or the electric system.
- When not using, all the electrical source should be turn off. Turn off the power switch and disconnect the battery connection.

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us! We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be guite encouraging if you could kindly do so like below:

★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE. GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History



We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.





