




COSTWAY®

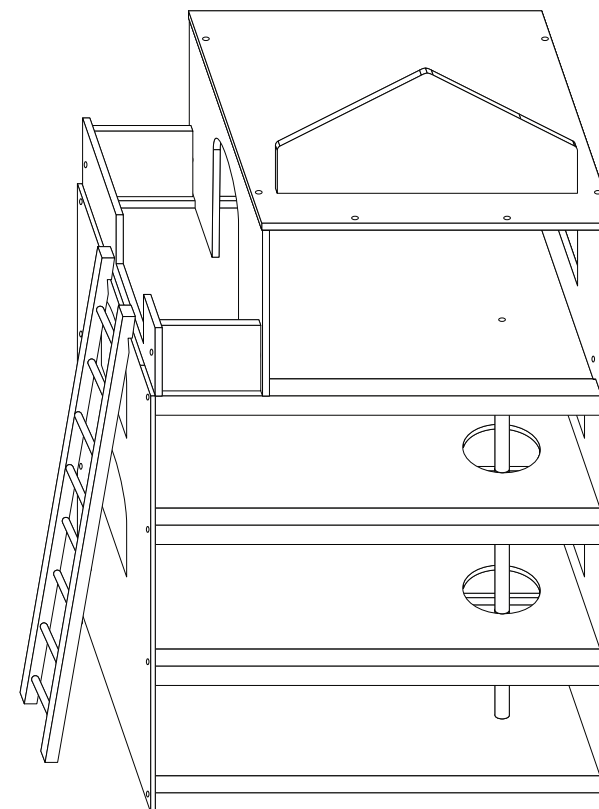

COSTWAY
www.costway.com

USER'S MANUAL
Fire Station Playset
TY327905

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

Please read all instructions carefully and keep it for future reference.

Warnings:

Attention: For home use only.


Attention: The Product is not suitable for the children under 3 years




Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.

Danger: Lack of attachment may cause a risk of tipping or fall hazards.


General Warnings:

- ⚠ The product must be installed and used under the supervision of an adult.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ Remove all packaging, separate and count all parts and hardware.
- ⚠ Please ensure that all parts are correctly installed, incorrect installation can lead to a danger.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during construction, and place the product always on a flat, steady and stable surface.
- ⚠ Please check and maintain regularly, the most important parts for suspension, fixing, anchoring to the ground.

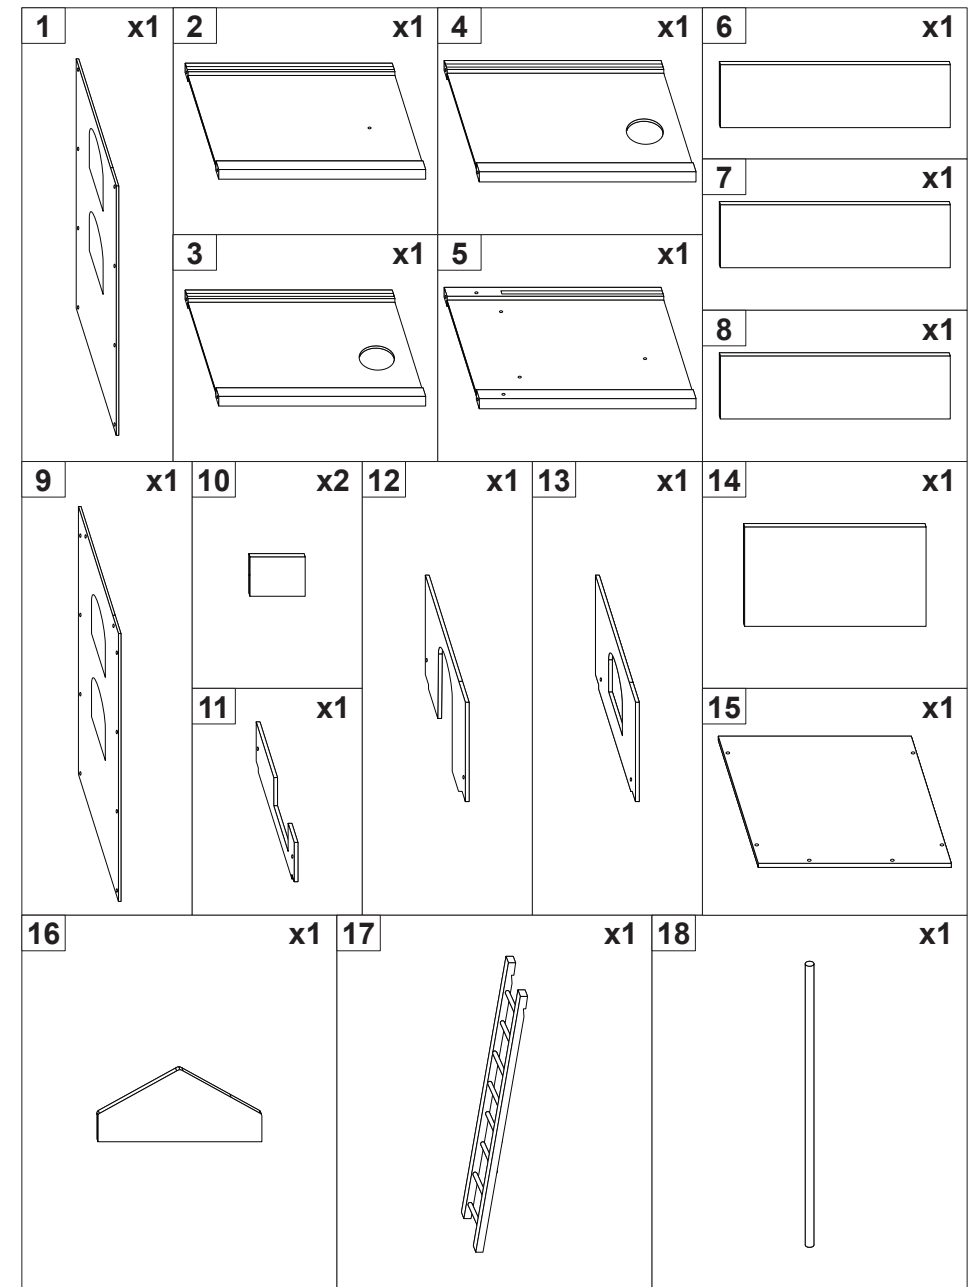

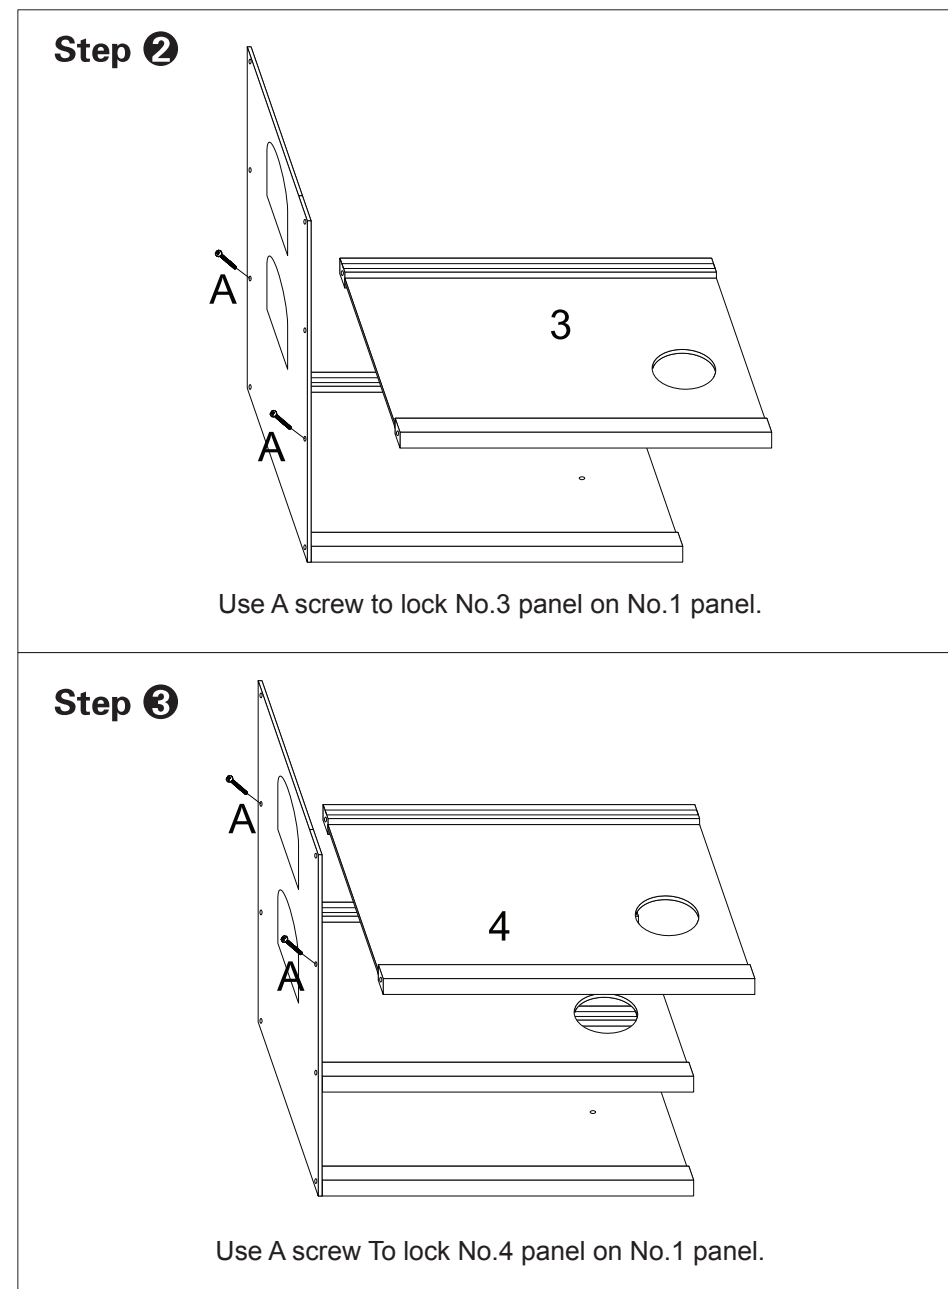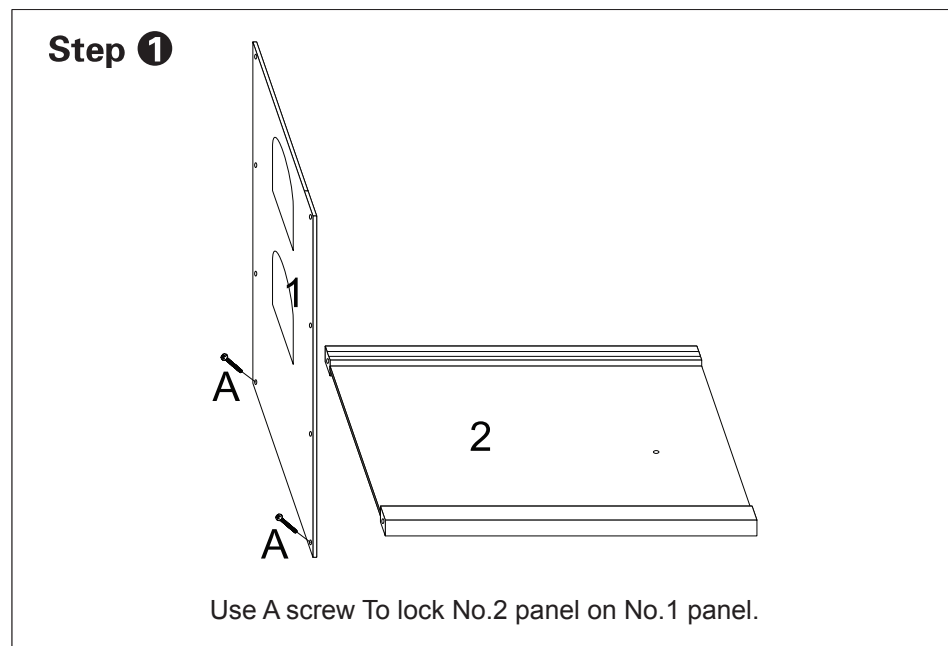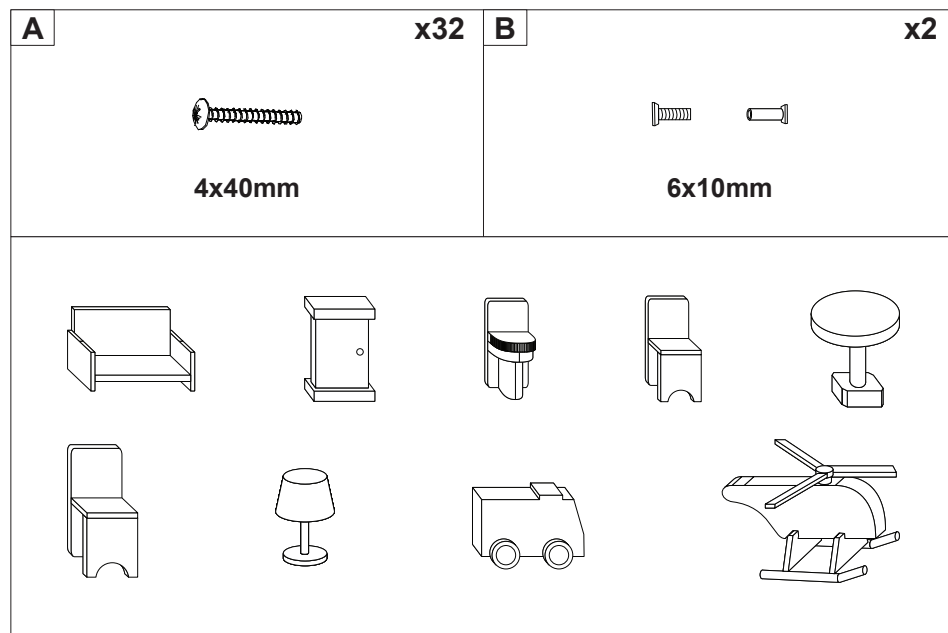


Step ④

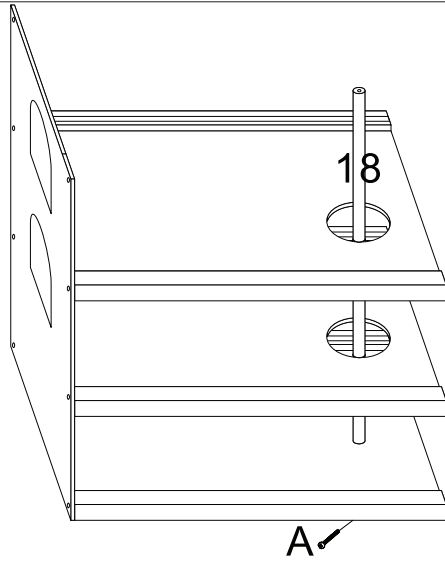


Use A screw to lock No.18(bar) on No.2 panel.

Step ⑤

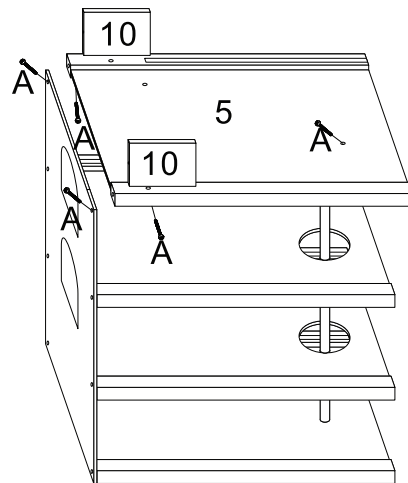


Use A screw to lock No.10 (2pcs) on No.5 panel, use A screw to lock No.5 panel on No.1 panel, use A screw to lock No.18 (bar) on No.5 panel.

Step ⑥

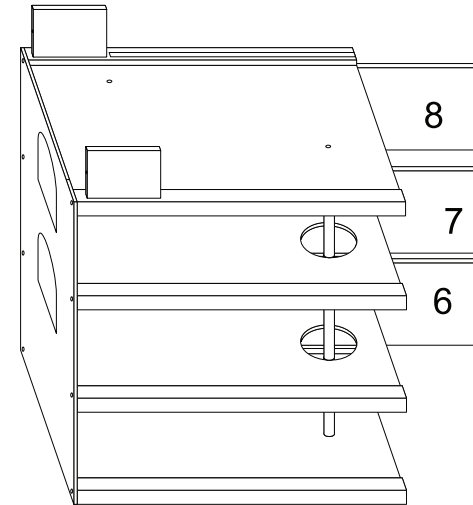


Insert No.6,7,8 panel in backside.

Step ⑦

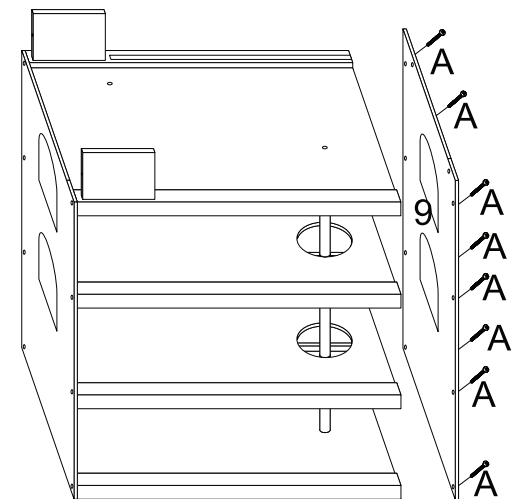


Use A screw to lock No.9 panel on on the right side.

Step 8

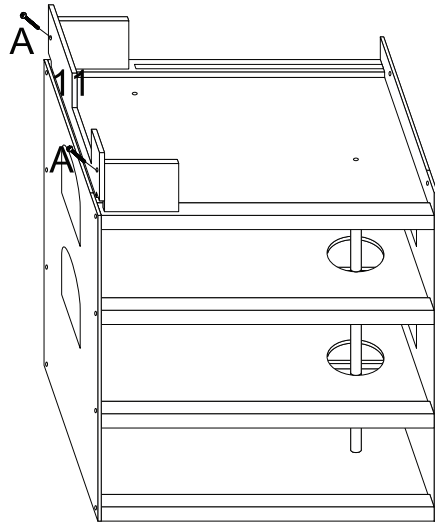


Use A screw to lock No.11 panel on No.10 panel.

Step 9

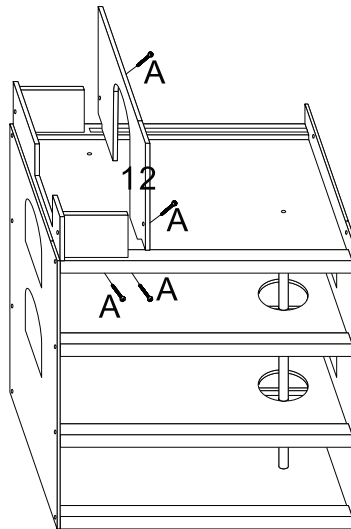


Use A screw to lock No.12 panel on No.5 panel, use A screw to lock No.12 panel on No.10 panel.

Step 10

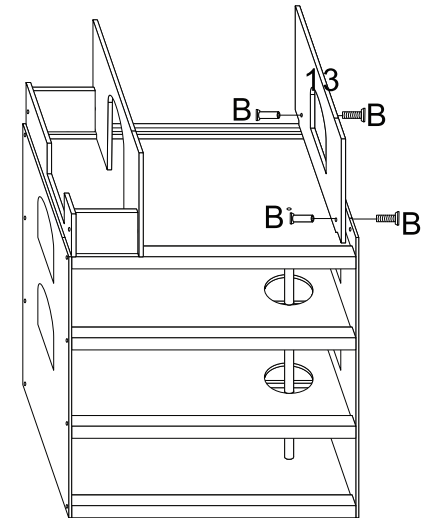


Insert B (2 pairs) screw in No.13 and No.9 panel, then lock it together.

Step 11

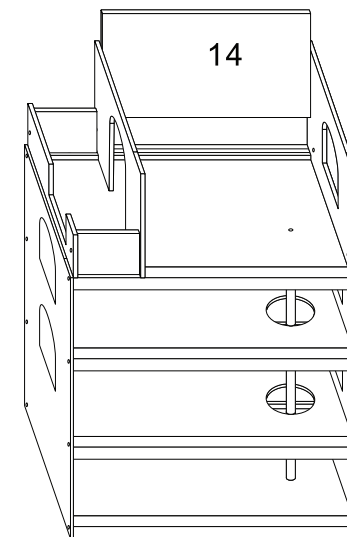


Insert No.14 panel in top groove.

Step 12

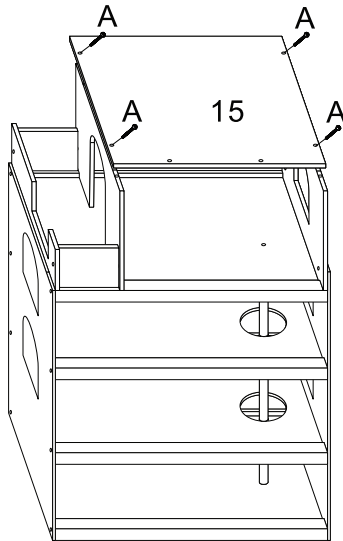


Use A screw to lock No.15 panel on No.12 and 13 panel.

Step 13

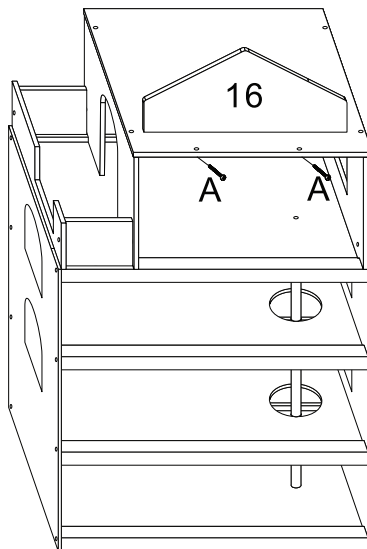

Use A screw to lock No.16 panel on No.15 panel.

Step 14

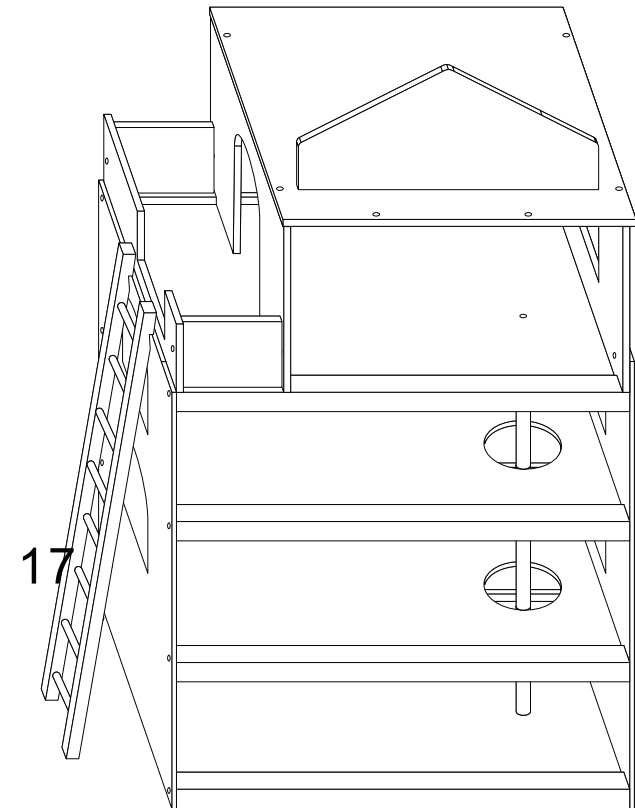

Put No.17 (ladder) on the left side.

Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

