

COSTWAY®



USER'S MANUAL
Double Stroller Wagon
TY327977

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

GOOD PRICE LIMITED Built with Quality Pride

Incorporating an ergonomic design with unrivaled luxury and safety features, our functional design combines aesthetics with utility to create the most skillfully crafted folding Stroller Wagon on the market. We've taken previous designs to the next level with our premium folding multipurpose Stroller Wagon. By incorporating an ergonomic design with luxury and safety features not found in other brands, our new multipurpose Stroller Wagon is the perfect combination of form, function and utility.

WARNINGS & IMPORTANCE NOTICE

WARNINGS

AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT-

Must fasten the seat belt. Never leave children unattended.

WARNING: Failure to read and follow these instructions may result in serious injury or death.

- Maximum child weight 110 lbs.
- Never leave your child unattended.
- Never use the wagon as a means to transport a child in a motor vehicle.
- Do not allow any part of the wagon storage bag to cover a child's nose or mouth.
- Only use the mattress pad provided by the manufacturer.
- Do not move or jump in the seat. Must fasten the seat belt.
- Both wheels must always be locked or unlocked at the same time.
- Always apply the brakes whenever the wagon is stationary. Never leave the wagon on a sloped surface, with a child on board.
- When opening or closing the wagon, ensure that your child is at a safe distance.
- Do not attempt to open or close the stroller with a child on board.
- Do not use the stroller on stairs or escalators. Take extra care when using the stroller on sloped or uneven surfaces.
- The brake must be locked while taking the child in or out of the stroller, and when parked.
- Watch out for cars - never assume that a driver can see you and your child.
- Always use your wrist strap -- these strollers can really roll, and the wrist strap gives you control if you should slip or fall down.

Care and Maintenance

FRAME AND FABRIC CARE :

- Prolonged exposure to direct sunlight may cause the materials and fabric to fade.
- Periodically wipe clean plastic parts with a soft damp cloth. Always dry the metal parts to prevent the formation of rust if the stroller has come into contact with water.
- Regularly check the condition of the wheels and, keep them clean of dust and sand.
- Do not fold or store if it is damp or wet, nor store in a damp environment.
- Contact Customer Service with any repair questions.



Wash by hand in cold water.



Do not bleach.



Do not tumble dry.



Do not iron.



Do not dry clean.

KEENZ WAGON has the right to modify the product at any time for the changed and development of the product.

Parts list



What's in the Box



Wagon



Canopy



Rear wheels



Front wheels

ASSEMBLY INSTRUCTIONS

⚠ WARNING

- Choking hazard to children under 3 years – contains small parts.
- During unpacking and assembly, make sure all parts and plastic storage bags are accounted for and kept out of the reach of children. All fasteners should be fully tightened.
- Do not attempt to open or close the product with children on board.

UNPACKING AND POSITIONING PRODUCT FOR ASSEMBLY



STEP 1: Remove all parts from the box and from plastic bags and storage bags.



STEP 2: After product is removed from plastic bags and storage bags, unlock the top buckle.



STEP 3: Pull product open to unfold.

STEP 4: Adjust handles as shown and invert product so that it rests on handles.



ASSEMBLY INSTRUCTIONS

INSTALLING FRONT WHEELS



STEP 1: Refer to page 7 for unfolding instructions; Adjust handles as shown and invert Stroller Wagon so that it rests on the handles.

STEP 2: Push and hold the wheel lock button.



STEP 3: Insert wheel on the Stroller Wagon frame.

STEP 4: Make sure the front wheels are secured.



ASSEMBLY INSTRUCTIONS

INSTALLING REAR AXLE

STEP 1: Position rear axle on Stroller Wagon frame with locking tabs facing outward as shown below.



STEP 2: Lift locking tabs on each side and secure the axle to the frame of the Stroller Wagon.



STEP 3: While lifting locking tabs, push axle assembly down on frame as shown.



STEP 4: Axle shown properly locked to Stroller Wagon frame.



INSTALLING REAR WHEELS

STEP 1: Push button on wheel center as shown.



STEP 2: While keeping button pushed, slide wheel onto axle rod. Release button to lock wheel in place.



ASSEMBLY INSTRUCTIONS

UNFOLDING AND LOCKING THE PRODUCT


STEP 1: Unlock the top buckle.




STEP 2: Pull product open to unfold.



STEP 3: When product is in the unfolded position, buckle the strap on the underside of the product. The product cannot be folded when the strap is buckled.

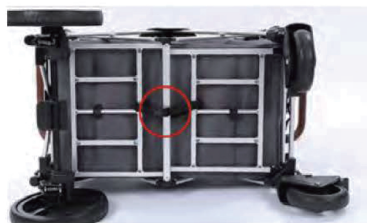

STEP 4: Insert middle part of the product frame under the fabric on each side as shown.

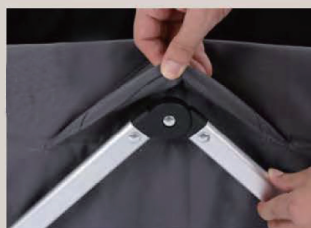

SAFETY WARNINGS FOR UNFOLDING AND LOCKING THE PRODUCT

⚠ WARNING

- Product may become unstable. Always make sure to buckle the strap on the underside of the product and to insert the middle parts of the frame under the fabric on each side to lock the fabric in place securely.
- There are pinch points between the product supports and frame that may injure fingers. Stay clear of pinch points when opening or closing the product or when making adjustments.
- To avoid injury, ensure that your child is kept away when folding and unfolding this product.

ASSEMBLY INSTRUCTIONS

⚠ WARNING

- Ensure that all locking devices are engaged before use.
- Check that the fabric is correctly engaged before use.
- Check that Stroller Wagon compartment (pram) is correctly engaged before use.

INSTALLING THE CANOPY



STEP 1: Canopy supports are released by sliding and holding button.

STEP 2: Lift support while continuing to slide button. Once support is fully extended, release button to lock in place.



STEP 3: Place the canopy on the four (4) supports as shown.

ASSEMBLY INSTRUCTIONS

FOLDING AND LOCKING THE PRODUCT

STEP 1: Reverse the 3 steps shown on page 11 to remove canopy and lower the 4 supports




STEP 2: Fold storage bin up and secure with strap and buckle.



STEP 3: Pull fabric off frame where shown and place fabric behind frame for easy folding.



STEP 4: Turn product on its side and unbuckle the strap on the underside of the product. The product cannot be folded when the strap is buckled.

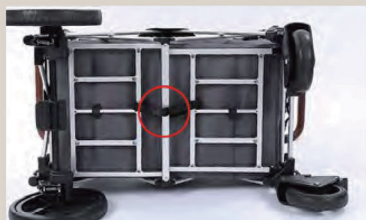

STEP 5: To fold the Stroller Wagon, pull up on the strap located at the interior center of the product.



STEP 6: When Stroller Wagon is in the folded position, use the buckle to lock the Stroller Wagon.



SAFETY WARNINGS FOR FOLDING AND LOCKING THE PRODUCT

⚠ WARNING

- Product may become unstable. After the product is folded, always make sure to secure the top buckle. The top buckle is engaged when you hear an audible "click."
- There are pinch points between the product supports and frame that may injure fingers. Stay clear of pinch points when opening or closing the product or when making adjustments.
- To avoid injury, ensure that your child is kept away when folding and unfolding this product.
- When opening and closing the product, make sure children are kept at a safe distance.
- Do not attempt to open or close the product with children on board.

ADJUSTING THE ANGLE OF HANDLE

STEP 1: Push button on each side of handle to make adjustments.



STEP 2: Handle can be adjusted in multiple positions.



Multiple positions



WARNINGS AND INSTRUCTIONS FOR 5-POINT SAFETY HARNESS

⚠ WARNING

- This product is only suitable for children ages 12 months and older. It is not suitable for younger children due to minimum balance and coordination required for safe use.
- Never leave children unattended.
- Always use restraint system.
- Avoid serious injury from falling or sliding out. Always use 5-point harness to secure children.
 - An audible "click" must be heard in order to determine that each seat and frame lock is secure and locked in the proper position.
 - To ensure proper locking engagement, check and make sure the fabric cannot be disengaged from the product without unlocking the device.
- Use 5-point safety harness as soon as your child can sit unaided.
- Check that the 5-point safety harness and all attachment devices are correctly engaged before use.
- Always apply brakes when taking children in or out.
- Do not hang items on the product at any time. The product may become unstable.

USE AND ADJUSTMENT OF THE 5-POINT SAFETY HARNESS

LOCKING AND UNLOCKING SAFETY HARNESS

The 5-Point seat belt is secured using buckles at two fastening points.



To unlock the safety harness, press the button to release the two fastening points.



ADJUSTING LENGTH OF SAFETY HARNESS

Both shoulder and lap belts are adjustable. Unbuckle belts to remove pads.



Adjust as needed and replace pads. Make sure belts are not too loose or too tight.



CHANGING SHOULDER HARNESS ANCHOR POINTS


The shoulder harness straps can be adjusted to fit your child. Use the top anchor point for children weighing 40 – 45 lbs. Use the lower anchor points for children weighing up to 39 lbs.



Push shoulder harness straps through lower anchor point slot.



To move shoulder harness straps to lower position, unbuckle shoulder harness straps from harness, undo snaps and Velcro closure and pull shoulder harness straps back through fabric.

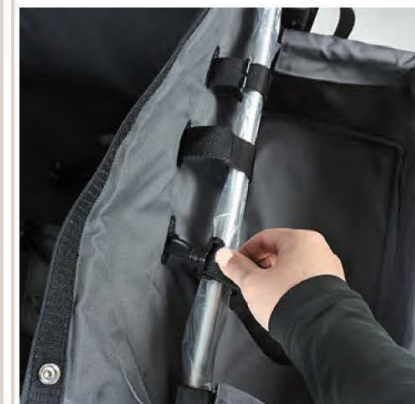

Adjust shoulder strap length, slide pad over strap and re-fasten Velcro and snaps.



OPERATING STROLLER WAGON

WITH FRONT HANDLE

STEP 1: Adjust the handle to a comfortable position. If transporting one child or a heavy load, secure the child in the 5-point harness closest to you. This will make the Stroller Wagon easier to maneuver.



STEP 2: Secure the storage bin with the buckle strap for added comfort and to prevent it from hitting your legs causing possible injury.



STEP 3: Place both hands on the handle. Do not attempt to maneuver with only one hand.



STEP 4: Grasp the handle in the middle and maneuver the product in the direction of travel.



WITH REAR HANDLE

STEP 1: Adjust the handle to your personal preference.



STEP 2: Grasp the handle on the sides for greater maneuverability. For smoother starts, pull back slightly before pushing forward.



OPERATING STROLLER WAGON

SAFETY WARNINGS FOR TRANSPORTING CHILDREN

⚠ WARNING

- Only for children ages 12 months and older. Not suitable for younger children due to minimum balance and coordination required for safe use.
- Never leave children unattended.
- Do not let your child play with this product.
- Always use restraint system.
- Avoid serious injury from falling or sliding out. Always use 5-point harness to secure children.
- Use 5-point safety harness as soon as your child can sit unaided.
- Check that the 5-point safety harness and all attachment devices are correctly engaged before use.
- Always apply brakes when taking children in or out.
- Secure stored items and keep them away from children so that children are not hit, trapped or suffocated by those items.
- The product may become unstable if the manufacturer's recommended load is exceeded.
 - Maximum weight limit per child is 45 lbs. (20 kg).
 - Maximum combined weight limit for the storage bin and bag is 20 lbs. (9 kg).
 - Maximum vehicle weight limit is 110 lbs. (50 kg).
 - Maximum height per child is 48" (122 cm).
- Loads attached to the handle or sides will affect the stability of the product.
- If a parcel bag other than one recommended by the manufacturer is used, the product may become unstable.
- Do not hang items on the product at any time. The product may become unstable.
- Do not install a mattress or other similar products in the Stroller Wagon compartment. The product could become unstable and children could fall out and be injured.
- Ensure that all locking devices are engaged before use.

⚠ WARNING

- Check that the fabric is correctly engaged before use.
- Check that Stroller Wagon compartment (pram) is correctly engaged before use.
- Do not use as a child car seat or to transport children in a motor vehicle.
- Do not sit on the storage bin or canopy. This may cause the product to collapse or become unstable.
- Never leave children in the product while ascending or descending stairs.
- Do not use the product on an escalator or moving walkway.
- Always use caution on uneven surfaces. Contents may become unstable and children could be injured by them.
- Do not allow children to play unsupervised next to the product.

OPERATING STROLLER WAGON IN FOLDED POSITION

STEP 1: Front wheels can be locked in position so that they don't swivel. Position each front wheel so that the brake pedal is facing the rear. Push down on the tab to lock the wheel in place.



STEP 2: Adjust the front handle to a comfortable position.

STEP 3: Push Stroller Wagon in the direction you wish to go.



SAFETY WARNINGS FOR OPERATING PRODUCT IN FOLDED POSITION

⚠ WARNING

- Do not transport children when product is in the folded position.
- Do not let your child play with this product.
- The product may become unstable if the manufacturer's recommended load is exceeded.
 - Do not exceed maximum load of 110 lbs. (50 Kg) for the product.
- Loads attached to the handle or sides will affect the stability of the product.
- Do not hang items on the product at any time. The product may become unstable.
- This product is not a jogger. This product is not suitable for running or skating. Do not use the product while running or jogging, with bicycles or motor vehicles, or while skating or during other similar activities.
- Ensure that all locking devices are engaged before use.
- Do not use as a child car seat or to transport children in a motor vehicle.
- Do not use the product on an escalator or moving walkway.
- Always use caution on uneven surfaces. Contents may become unstable and children could be injured by them.
- The front wheel locking system should only be used when the Stroller Wagon is in the folded position. Do not engage the locking tabs when transporting children.
- Do not allow children to play unsupervised next to the product.
- Please note that the Stroller Wagon cover may not fit when the product is in the folded position and the front wheels are locked in the non-swivel position.

STROLLER WAGON BRAKING SYSTEMS

FRONT WHEEL BRAKES

TO LOCK: Step downward on the top of the pedal of each wheel. Push down on the pedal with your foot as far as the pedal will go. Make sure the pedal is fully depressed and that the front wheels will not move.



TO UNLOCK: Place your foot on underside of pedal of the each wheel. Lift the pedal up with your foot as far as the pedal will go. The front wheels will now move.



LOCKING REAR AXLE

TO LOCK: Step downward on the top of the pedal as far as the pedal will go. Make sure the pedal is fully depressed and that the rear wheels will not move.



TO UNLOCK: Place your foot on the underside of the pedal. Lift the pedal up with your foot as far as the pedal will go. The rear wheels will now move.



SAFETY WARNINGS FOR PARKING AND BRAKING

⚠ WARNING

- Always make sure the brake pedals are fully depressed and that the wheels will not move before you release the handle.
- Always apply the brakes when taking children in or out.
- Always lock the brakes when parked to prevent unintended movement.
- Do not park on elevated or sloped surfaces with children on board, even if the brakes have been locked.

REMOVING STROLLER WAGON WHEELS

REMOVE REAR AXLE



STEP 1: Invert Stroller Wagon as shown on page 5. Pull up on lock on each side as shown.



STEP 2: While pulling up the lock, lift the rear axle to remove from frame.

REMOVING REAR WHEELS

Wheels can be left on rear axle or removed.



STEP 1: While pushing on button as shown, pull wheel to remove from axle. Repeat on the other side.

STORAGE BIN

THE STORAGE BIN CAN BE MOVED
TO THE OTHER SIDE OF THE STROLLER WAGON

MULTIPLE USES

The photo below shows the storage bin mounted at the front of the Stroller Wagon. It can be moved to the rear or removed completely from the product.



OPENING STORAGE BIN

If storage bin is folded up, undo the buckle to open it.



REMOVING STORAGE BIN

STEP 1: Make sure storage bin is empty before attempting to remove it from the Stroller Wagon.



STEP 2: Place one hand on bumper for leverage and position storage bin at an angle. Pull out at angle to release storage bin and remove from Stroller Wagon.



INSTALLING STORAGE BIN

STEP 1: Go to front of Stroller Wagon and locate mounting points for storage bin.



STEP 2: Position storage bin at angle that matches up with mounting points. Push storage bin into mounting points to secure to frame. Make sure the mounts line up correctly.



OPENING & CLOSING THE MESH TOP

OPENING MESH TOP

STEP 1: Using the two zippers on each side, unzip the mesh top in any direction.



STEP 2: The mesh top can be opened on both the front and the back at the same time.




CLOSING MESH TOP

STEP 1: Using the two zippers on each side, zip the mesh top closed.



STEP 2: Finish securing the top using the magnetic closures where indicated.

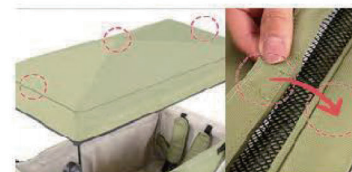

USING THE SIDE CURTAINS

STEP 1: Undo the three elastic toggles to roll down the built-in curtains.




STEP 2: At the bottom of each curtain, there are two Velcro straps that can be attached to the frame.



REMOVING FABRIC

HOW TO REMOVE FABRIC FOR CLEANING

STEP 1: Turn the product on its side. Remove underside strap from frame and undo Velcro straps from frame.

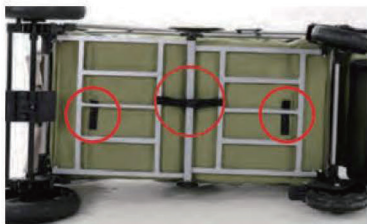

STEP 2: Undo all buckles.



STEP 3: On the rear of the Stroller Wagon, unfasten Velcro and snaps, remove harness straps and waist straps from Stroller Wagon frame.




STEP 4: Repeat step 3 on the front of the Stroller Wagon.



REMOVING CANOPY FABRIC

STEP 1: Undo Velcro piece covering center brace in the canopy interior.

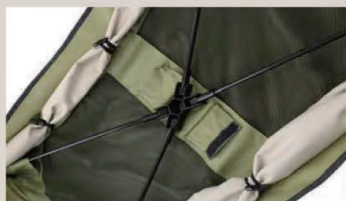

STEP 2: Remove each corner of the canopy frame from the canopy material as shown.



Welcome to visit our website and purchase our quality products!

With your inspiring rating, COSTWAY will be more consistent to offer you **EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to all of our customers for taking time to assemble this product and giving us valuable feedbacks.

THANK
YOU
😊