



COSTWAY®

COSTWAY
www.costway.com



USER'S MANUAL
Activity Gym and Play Mat
TY578042

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

- ⦿ Please read all instructions carefully.
- ⦿ Retain instructions for future reference.
- ⦿ Separate and count all parts and hardware.
- ⦿ Read through each step carefully and follow the proper order.
- ⦿ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⦿ Always place the product on a flat, steady and stable surface.
- ⦿ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

Consumer Information

WARNING


Prevent Entanglement Injury
Never place gym in a crib/cot or playpen. Never add strings, ties or other products to the gym.

- Please keep this instruction sheet for future reference, as it contains important information.
- Requires three "AA" (LR3) **alkaline** batteries for operation (not included).
- Tool required for battery installation: Phillips screwdriver (not included).



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

Assembled Parts

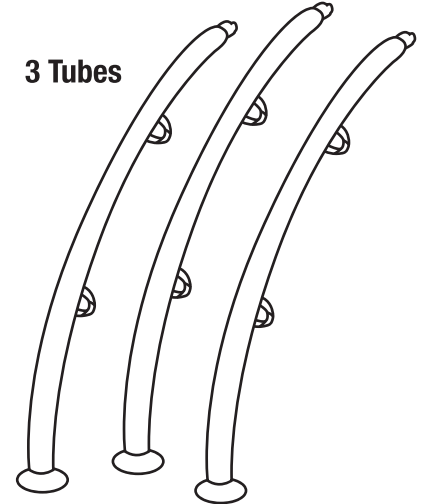

3 Tubes


3 Hanging toys with squeaker, crinkle, rattle, press or shake any of them to listen the sound



Hub



4 Hanging Toys

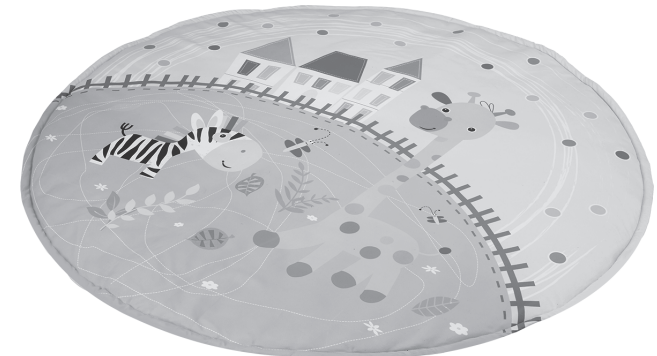

Quilt

Battery Installation



- Locate the battery compartment door on the back of the bear toy.
- Loosen the screws in the battery compartment door with a phillips screwdriver. Remove the battery compartment door.
- Insert three "AA" (LR3) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer battery life.


- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- If this toy begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds from this toy become faint or stop, it's time for an adult to change the batteries.

Battery Safety Information


In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Setup

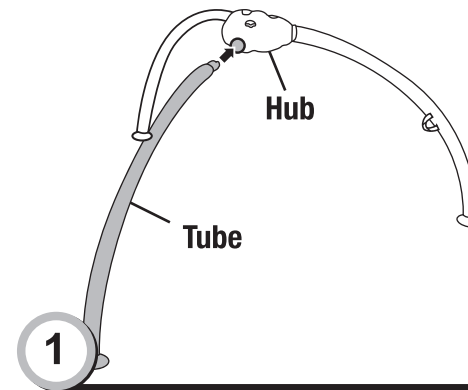


- Insert and snap the tubes into the hub.

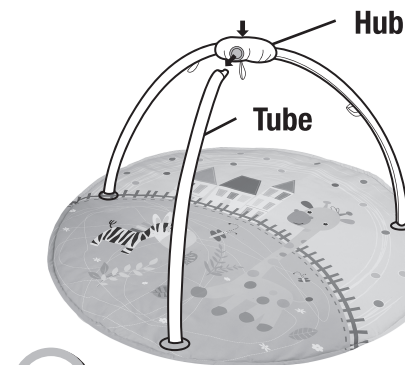

- Lay the quilt out on a flat surface with the decorated side up.
- Insert the end of each tube into the slots in the quilt.

Projector with Music and LED light

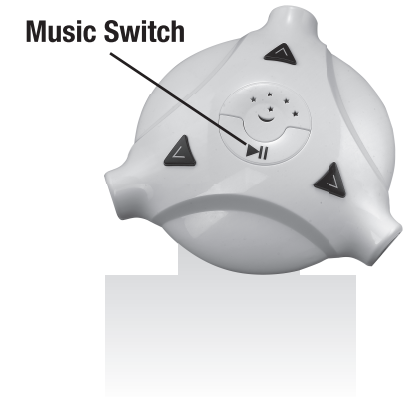


Press the switch to listen the music and watch the lights changing colors




- Hang the toys from any of the loops around the gym.

Storage

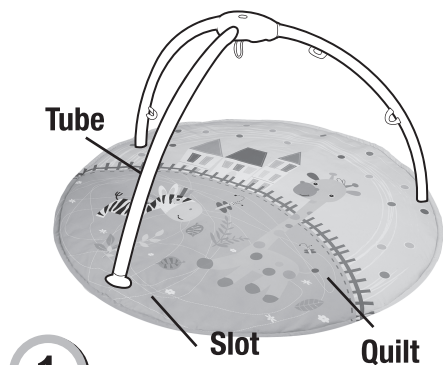

1

- Remove all the toys from the loops around the gym.
- Remove the lower end of each tube from the slots in the quilt.
- Push the button on top of the hub and remove each tube.

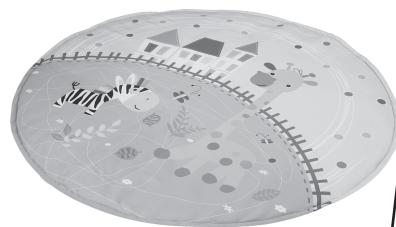


2

Large Carry Loop

- Place the tubes, hub and toys towards the large carry loop on the quilt.


Hint: Make sure the ends of the tubes are facing the storage loop, as shown.

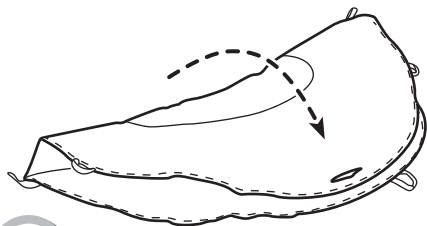

3

- Fold the quilt in half, as shown.

Storage

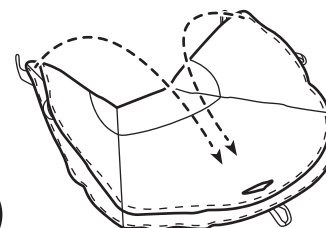


4

- Fold the sides of the quilt, as shown.


Storage Strap

Loop

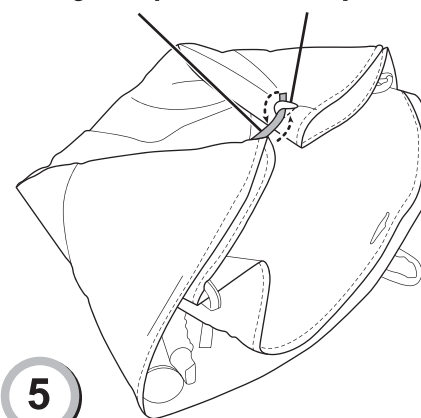

5

- Fit the storage strap through the loop, as shown. Fold the strap over to fasten it.

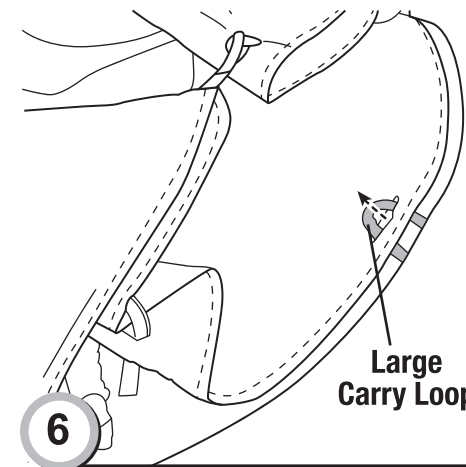

6

- Fit the large carry loop through the slot for easy carrying.

Care

Quilt

- Wash the quilt in cold water on the gentle cycle. Do not use bleach. Tumble dry low.

Tubes, Hub and Toys

- Wipe the surface with a clean cloth dampened with a mild soap and water solution. Do not use bleach.
- Do not immerse the bear toy.

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us!
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

THANK
YOU
😊