




COSTWAY®

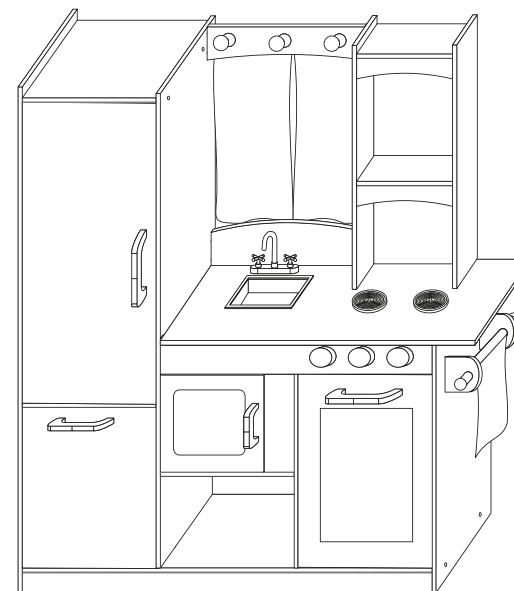

USER'S MANUAL

Children's Play Kitchen With Refrigerator

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Please give us a chance to make it right and do better!

Contact our friendly customer service department for help first.

Replacements for missing or damaged parts will be shipped ASAP!

Follow Costway

Visit us: www.costway.com



Contact Us!

Do NOT return this item.

Contact our friendly customer service department for help first.



Before You Start

Please read all instructions carefully and keep it for future reference.

General Security Warning

Caution: The Product is not suitable for the children under 3 years

Danger: Keep all small parts and packaging materials for this product away from babies and children, otherwise they may pose a choking hazard.


Danger: Lack of attachment may cause a risk of tipping.




WARNING:
CHOKING HAZARD-Small parts.
Not for children under 3 years.

Warning for Assembly

- ⚠ Construction only by adults
- ⚠ Remove all Packaging, separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Ensure a secure surface during construction, and place the product always on a flat, steady and stable surface.

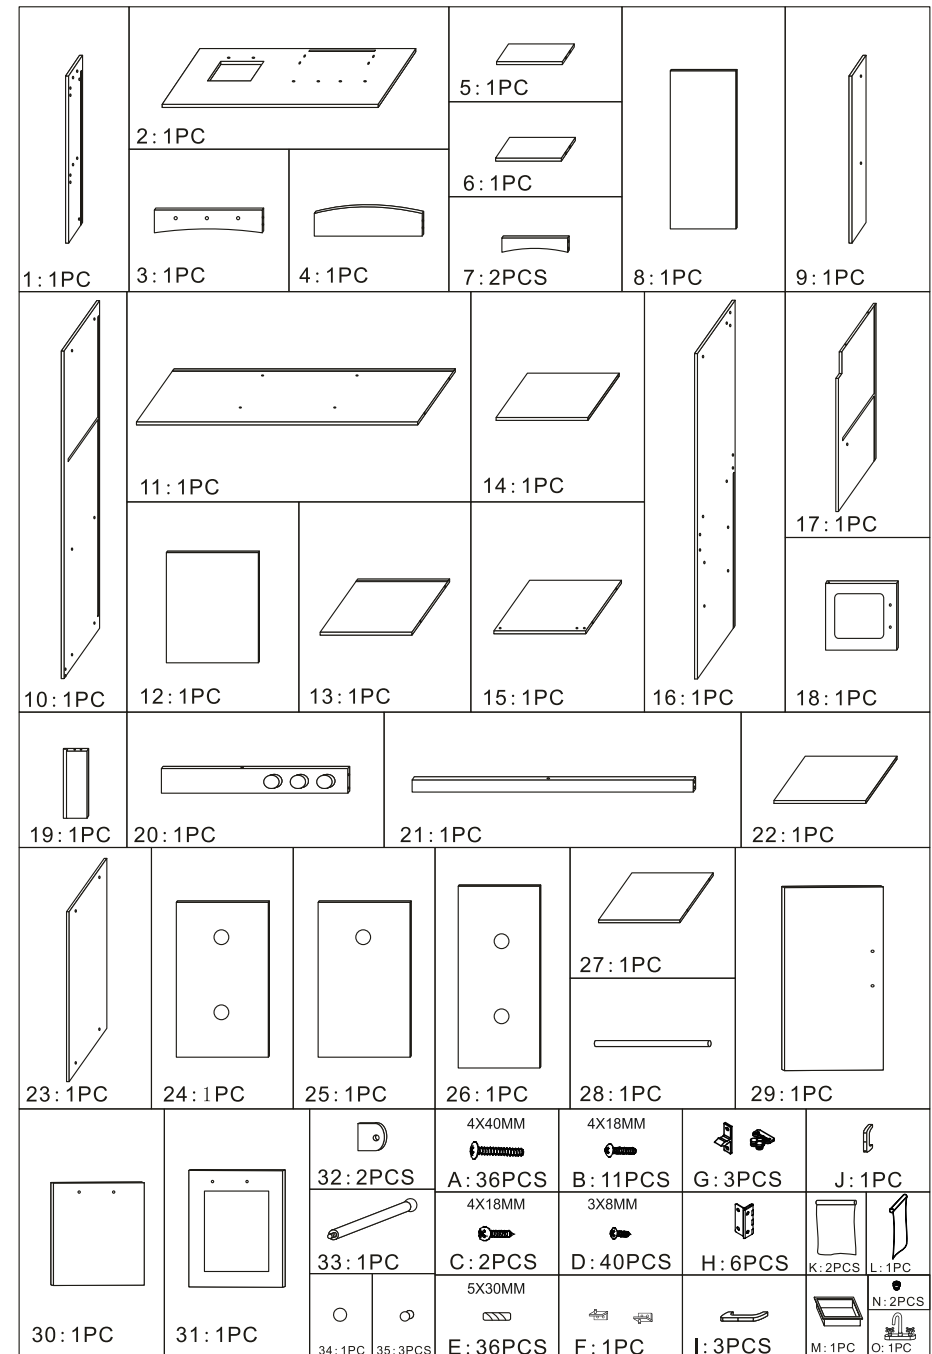


Step ①

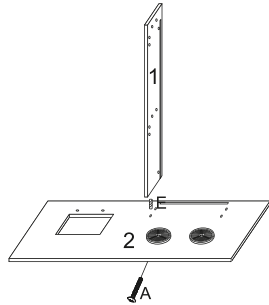


Insert E (wooden dowel) to No.1 panel, use A screw to lock it on No.2 panel.

Step ②

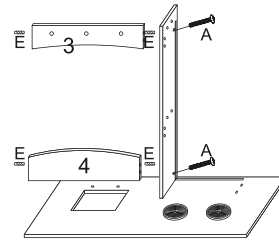


Insert E(wooden dowels) to No.3 and No.4 panel, use A screws to lock it on No.1 panel.

Step ③

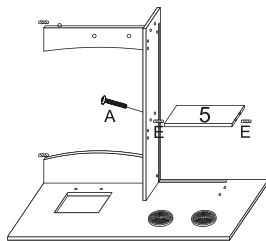


Insert E(wooden dowels) to No.5 panel, use A screw to lock it on No.1 panel.

Step ④

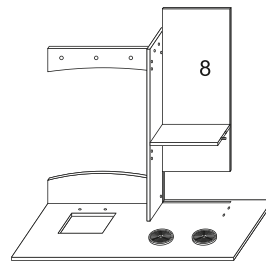


Insert No.8 panel in grooves.

Step ⑤

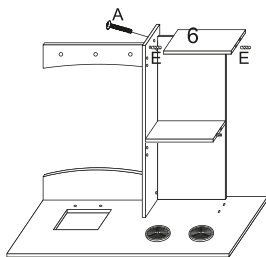


Insert E(wooden dowels) to No.6 panel, use A screw to lock it on No.1 panel.

Step ⑥

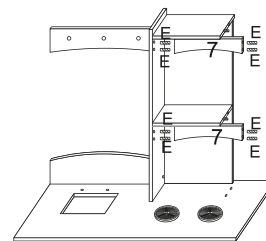


Insert E (wooden dowels) to 2pcs No.7 panel.

Step ⑦

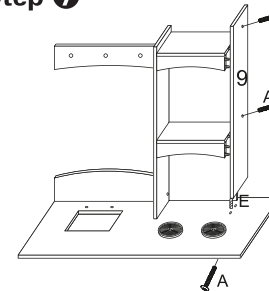


Insert E(wooden dowels) to No.9 panel, use A screw to lock it on counter-table.

Step ⑧

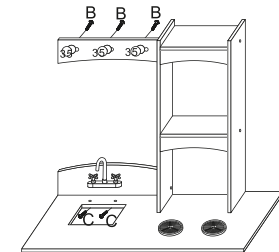


Use B screws to lock No.35(3pcs) on No.3 panel, use C screws to lock taps(O) on counter-table.

Step ⑨

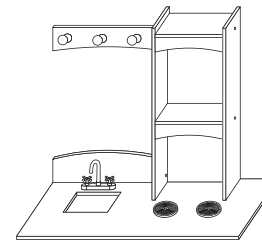


The upper kitchen be finished.

Step ⑩

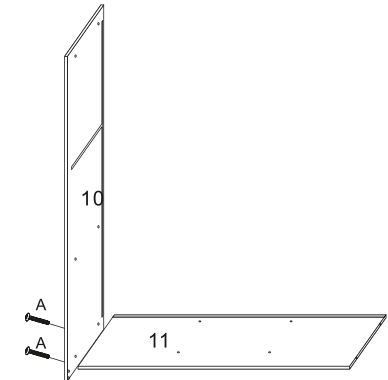


Use A screws to lock No.10 on No.11 panel.

Step ⑪

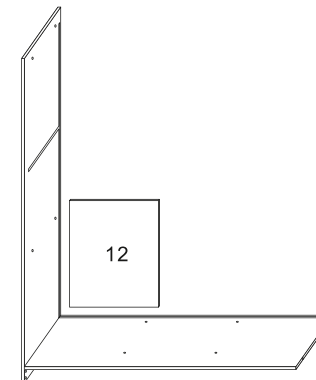


Insert No.12 panel on No.11 panel grooves.

Step ⑫

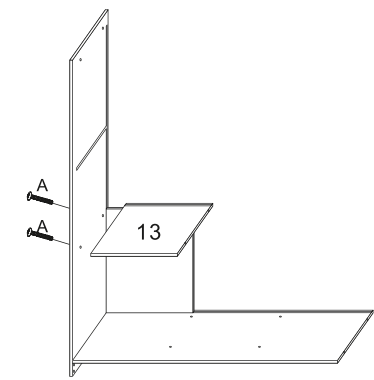


Use A screw to lock No.13 panel on No.10 panel.

Step 13

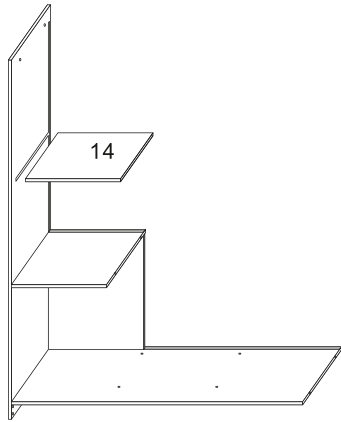


Insert No.14 panel on No.10 panel upper grooves.

Step 14

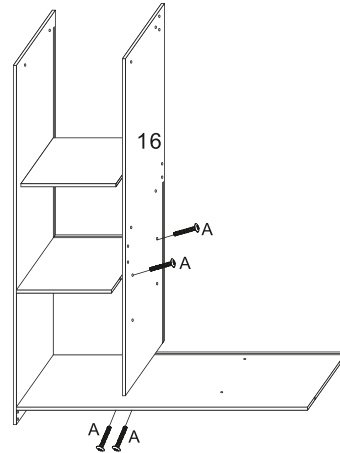


Use A screws to lock No.16 panel on No.11 panel.

Step 15

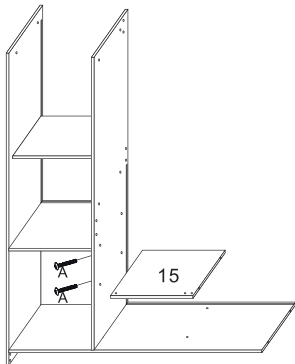


Use A screw to lock No.15 panel on No.16 panel.

Step 16

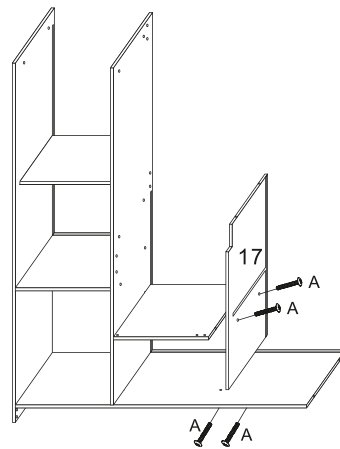


Use A screw to lock No.17 panel on No.11 panel.

Step 17

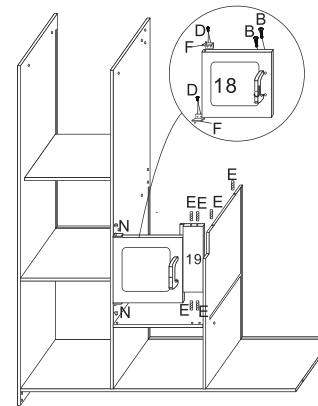


Insert N(hinges) on No.18 panel, insert E(wooden dowel) to No.19 and No.17 panel, use B screw to lock J(handle) on No.18 panel, use D screw lock F(hinges) on No.18 up and down.

Step 18

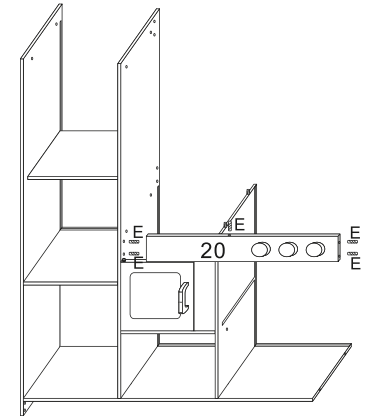


Insert E(wooden dowels) to No.20 panel.

Step 19

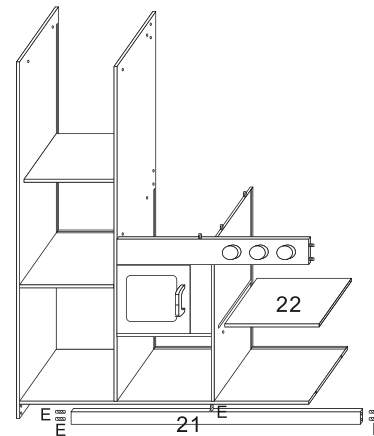


Insert E(wooden dowels) to No.21 panel, insert No.22 panel to No.17 panel groove.

Step 20

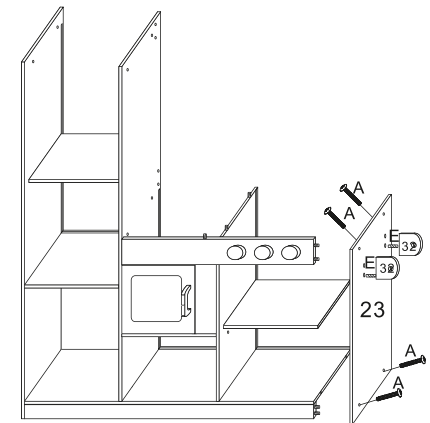


Insert E(wooden dowels) to No.32 panel, use A screws to lock it on No.23 panel, use A screws to lock No.23 panel to No.11 panel.

Step 21

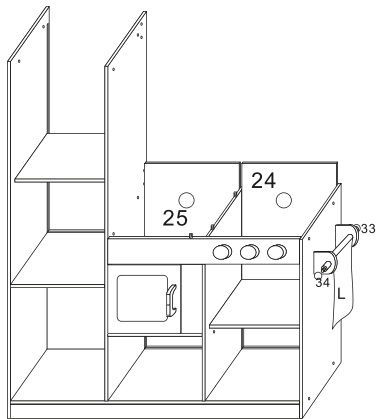


Put inside No.24 and No.25 panel in groove, insert L(bar) to No.33 and No.34 panel.

Step 22

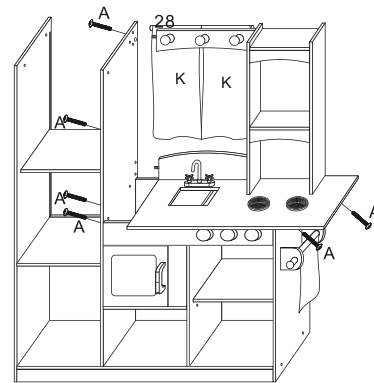


Put the upper finished parts on kitchen, use A screws to lock it on kitchen, put K (fabrics) inside No.28 (bar).

Step 23

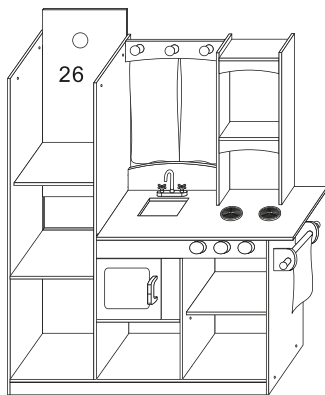


Insert No.26 panel to fridge.

Step 24

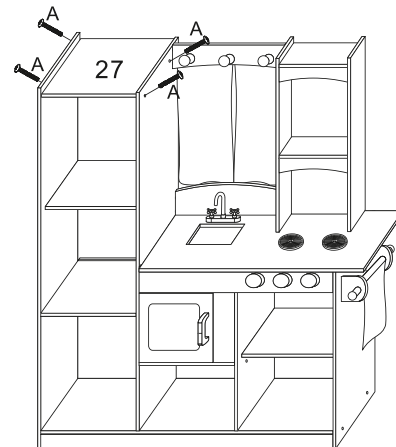


Use A screws to lock No.27 panel on fridge.

Step 25

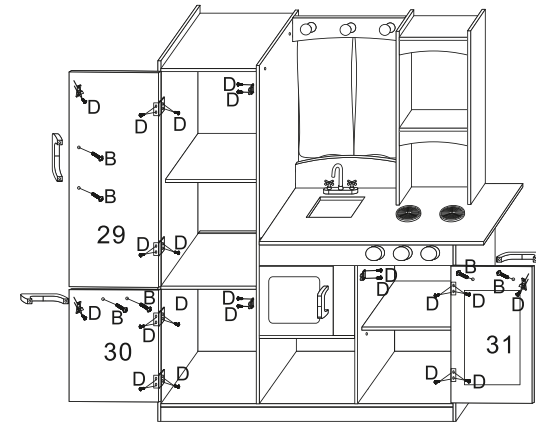


Use B screws to lock I(handles) on No.29,30 and 31 panel, use D screw lock the female(3 pcs) door latches on No.16 and 17 panel, use D screw lock the male(3 pcs) door latches on No.29,30,31 panel, use D screw lock hinges on No.29, 30,31 panel.

Step 26

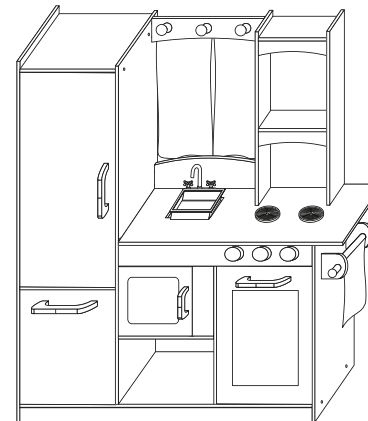

Put inside M (sink) on kitchen.

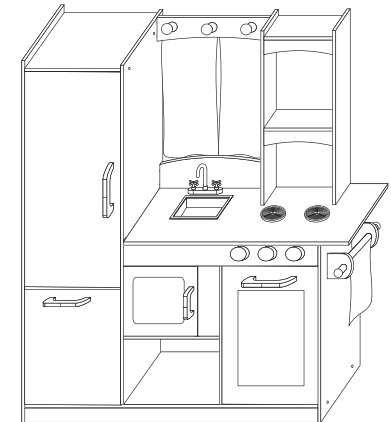

Finish the kitchen assembly.

Welcome to visit our website and purchase our quality products!

Your suggestions and comments for COSTWAY are really important to us!

We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2019

Great products so far. Fast delivery, easy setup, and working without any issues.

**With your inspiring rating, COSTWAY will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**

US office: Fontana, California

UK office: Ipswich



- * Reward Points
- * Exclusive Customer Service
- * Personalized Recommendations
- * Permanent Shopping Cart
- * Order History

5 Star Rating



We would like to extend our heartfelt thanks to
all of our customers for taking time to assemble
this product and giving us valuable feedbacks.

THANK
YOU
😊