

285x210mm

**TIPS:**

Your suggestions and comments for Costway are really important to us! We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far  
February 24, 2018  
Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, Costway will be more consistent to offer you **EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**


US office:Fontana  
UK office:Ipswich



**USER'S MANUAL**  
**Park Chair**  
**OP2785**

PRODUCT ASSEMBLY

PARTS & HARDWARE LIST		
PART #	DESCRIPTION	QUANTITY
A	Straight Back	1
B	Wood Seat Slats	5
C	Leg & Arm Frame	2
D	Side Seat Brace	2
E	6mm x 32mm Bolt	14
F	6mm Washer	16
G	6mm Nut	16
H	Screw 4mm x 16mm	7
I	Plastic Nut Cover	4
J	Middle Seat Brace	1
K	6mm x 25 mm Bolt	2

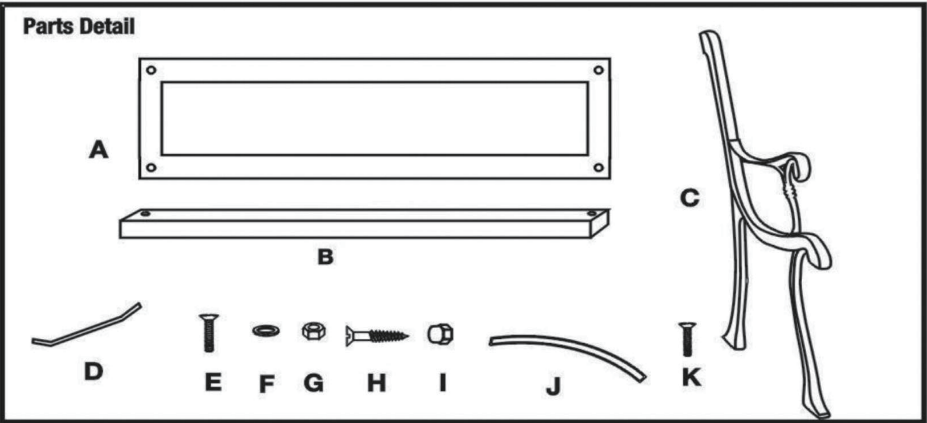


Carefully remove the contents from the package. If any parts are missing do not attempt to use the product until they have been obtained and correctly installed.

NOTE: This product is intended for residential, non-commercial use.

**CAUTION:** Do not over tighten fasteners.

1. (SEE FIGURE 1) Using bolts (E), washers (F) and nuts (G) attach one end of the straight back (A) to the leg & arm frame (C). Attach the other end of the back to the second leg & arm brace (C).

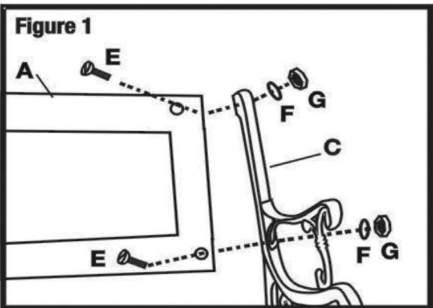


PRODUCT ASSEMBLY


ITEM NO.:OP2785

ASSEMBLY INSTRUCTIONS

2. (SEE FIGURE 2) Attach the wood slats (B) to leg and arm support (C) as shown. Repeat on the other side, but do not tighten bolts until all wood slats (B) are in place and bench is upright on the floor.

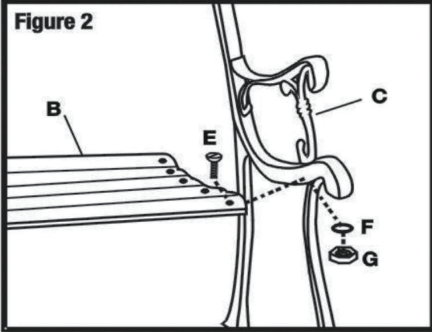

3. (SEE FIGURE 3) Turn the bench over on a non-scratch surface and attach middle seat brace (J) to the slats (B) at the midway point between legs (C) using wood screws (H). Work from the front to back, as necessary to fit the contour of the bench. Attach side seat brace (D) to the leg (C) using bolt (K), washers (F) and nut (G), connect side seat brace (D) to the slats (B) at the sideways point between legs (C) using wood screws (H).

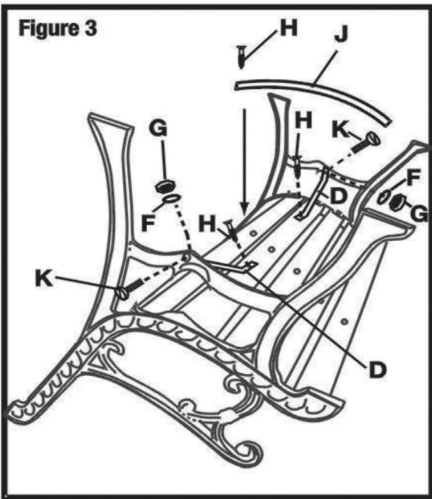

4. Ensure all fasteners are securely tightened.

5. (SEE FIGURE 4) Add plastic nut cover (I) to nut (G) located on backside of straight back (A).

