


# ASSEMBLY INSTRUCTIONS

**WARNING**  
CHOKING HAZARD  
This product contains small parts.



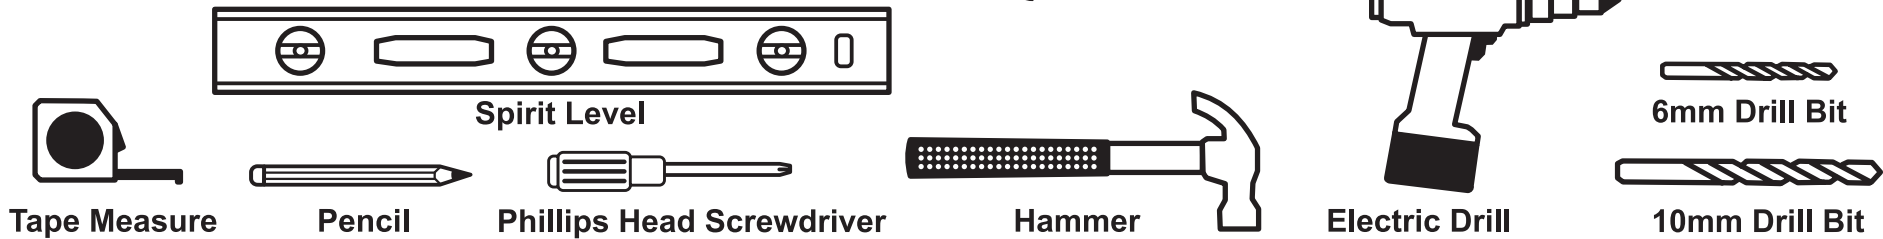














## TOOLS REQUIRED




## LIST OF PARTS


### IMPORTANT:

Check that you have all parts as listed.  
Depending on the configuration you choose, you may not use all components supplied.  
Anchors for stud and plaster walls are included. Anchors for concrete or steel walls must be purchased separately.  
Read through instructions before commencing assembly and see Recommendations above.

Description	Product	Code	Qty	
Shelf 920mm X 335mm	Ⓐ	SA920	1	
Shelf 920mm X 350mm	Ⓑ	SB920	1	
Shelf 666mm X 335mm	Ⓐ	SA666	2	
Shelf 666mm X 350mm	Ⓑ	SB666	2	
Wallstrip 762mm		WS762	6	
Wallstrip 292mm		WS292	2	
Bracket - 350mm with Locking Widget		BR350	12 of each	
Hang Track 914mm		HT914	2	
Clothes Rod Hanger and Hanger Widget		RH	8 of each	
Hanging Rod Ø 23.7mm x 914mm - Inner Rod		HR914	1	
Hanging Rod Ø 25mm x 914mm - Inner Rod		HR914	1	
Hanging Rod Ø 23.7mm x 660mm - Inner Rod		HR660	1	
Hanging Rod Ø 25mm x 660mm - Inner Rod		HR660	1	
Hang Track Cover Strip		CS558	4	
Wall Strip Joiner		WSJ	4	
Screws			22	
Anchors			19	

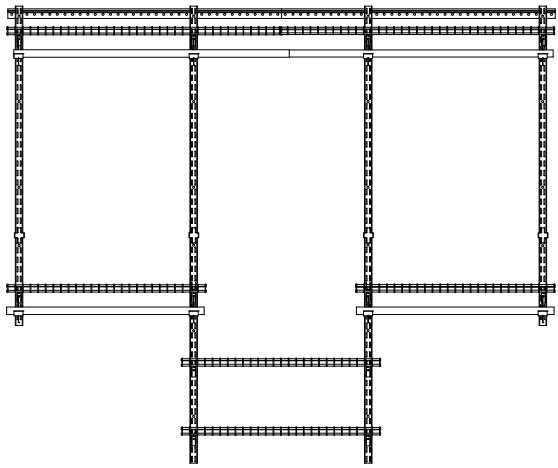


Colour: White

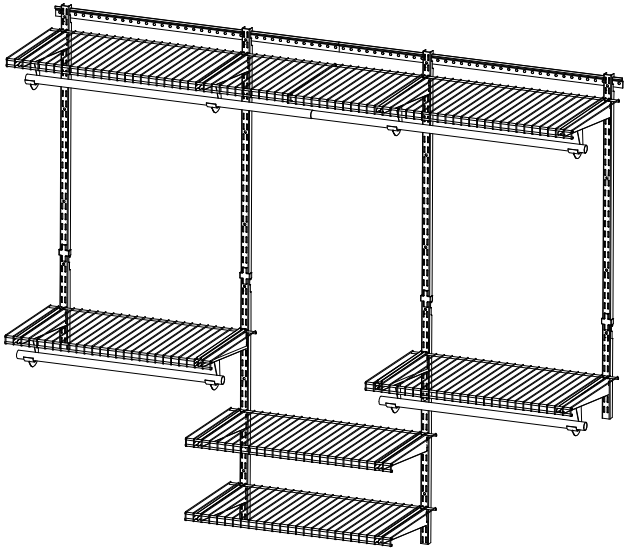


Colour: White


1 Mount Extendable Hang Tracks

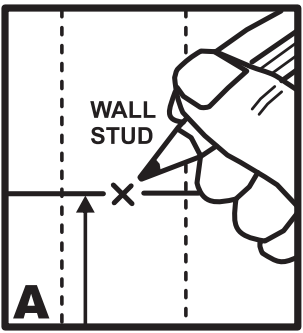

Locate all wall studs on closet wall and mark with an 'X' at the maximum height you require your system to be positioned.  
**NOTE:** Please consider the maximum height of the Wallstrips to ensure there is ample clearance from the floor.

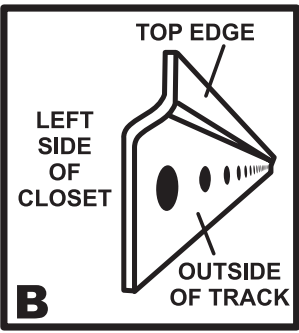


Position first Hang Track so that the track is touching the left side of the closet (if that is where you wish to install your system, otherwise start at a point in the closet that best suits your needs).

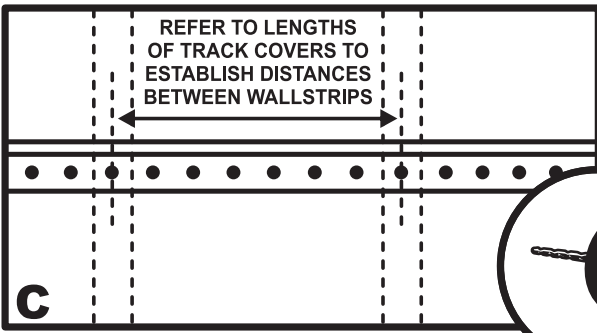


Using a spirit level to ensure Hang Track is level, mark the holes where the wall studs are, then drill a pilot hole.  
**NOTE:** If wall studs are not available, please use plaster anchors or masonry plugs.


If there is no wall stud to fix a screw through the second hole from the left, please ensure you use a suitable wall anchor. (see Steps 1 and 2 below).

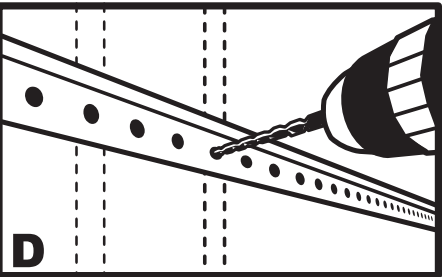


Starting at left side, fasten the FIRST TWO screws into studs (or anchors). Do not fasten remaining screws until after next step.  
**NOTE:** Screws need to be fastened through Track into EACH wall stud.

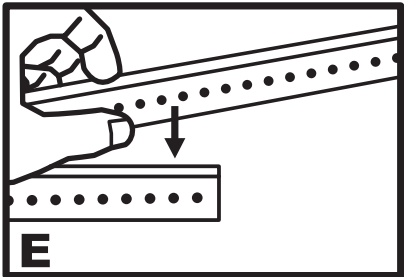


Slide second Hang Track down behind the first from above.  
**NOTE:** Not applicable for unit CCBW.

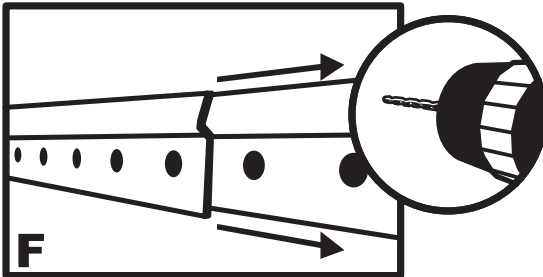


Slide second Hang Track to the right wall of the closet, and then back it away from the right wall until the holes in the two Tracks line up. Repeat Step C to secure to the wall.  
If there is NOT a stud at the RIGHT end of the Hang Track, repeat the wall anchor installation. (Steps 1 & 2 above).

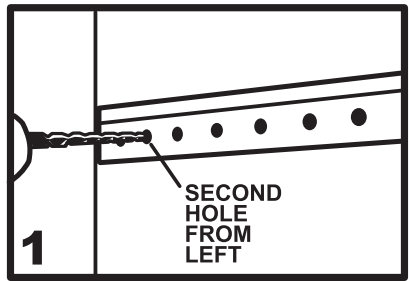

Mark and drill a hole (for a wall anchor) in the second Hang Track hole from the left.

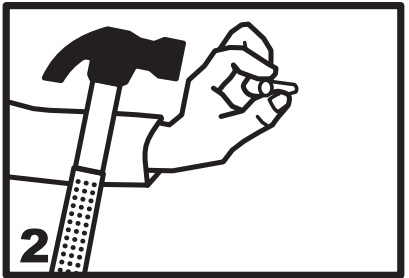


Hammer the wall anchor flush to the wall in the drilled hole.

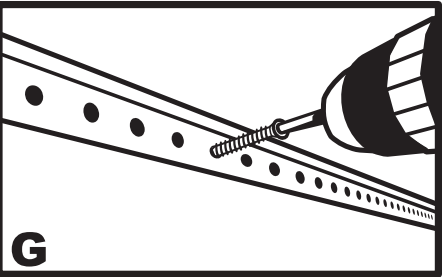


Install screws into studs (or anchors) along Tracks.


2 Hang Wallstrips

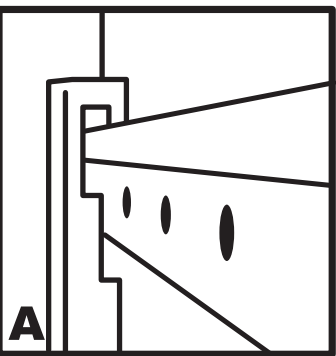


Hang first two Wallstrips over the Hang Track.

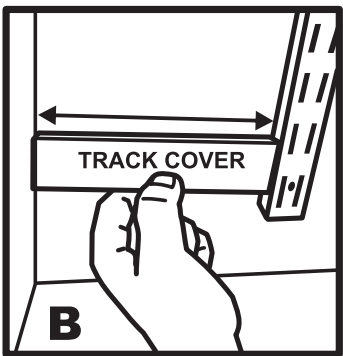


Position BOTH outside Wallstrips from the right and left corners by using the smaller Track Cover for spacing.

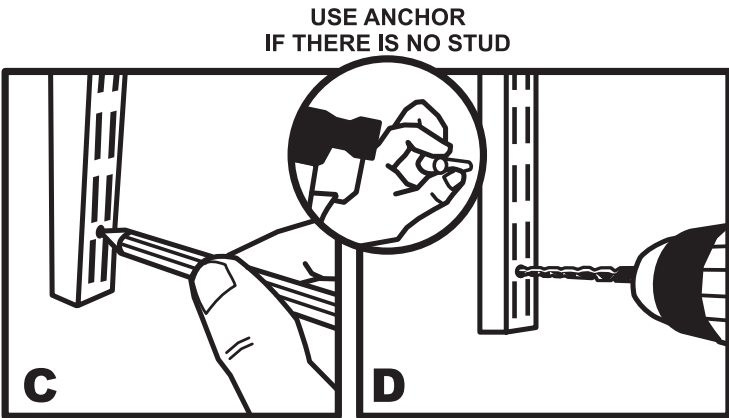


Mark bottom hole of Wallstrip. Drill a pilot hole into the stud (or wall anchor if no stud is available).  
Fasten screw into stud or wall anchor.  
**NOTE:** No screws are needed in top holes of Wallstrips.

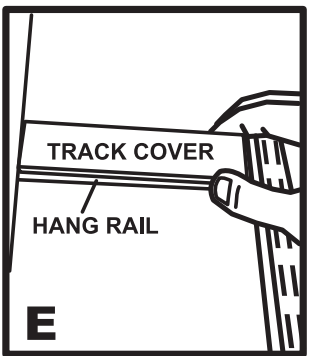

Clip Track Cover over Hang Track.

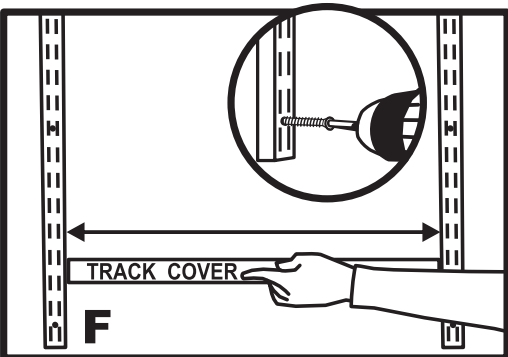


Hang another Wallstrip on the Track and use one of the Track Covers to space apart. Drill a pilot hole and fasten screws in bottom hole of Wallstrip. (Use wall anchor if there is no stud). Place Track Cover over Track between Wallstrips. Repeat Step F for one or two more Wallstrips (if space allows).

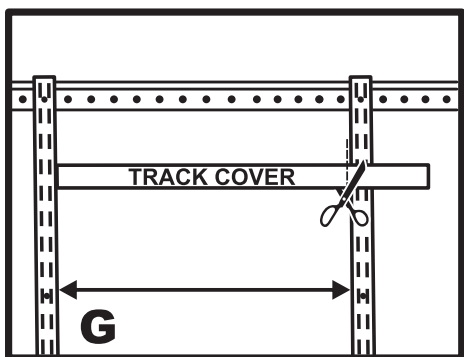


If the space between the last Wallstrip is less than the length of the Track Cover, you may choose to cut Track Cover with scissors to fit.

3 Install Wallstrip Extensions


**NOTE:** Only applicable for unit CCBW

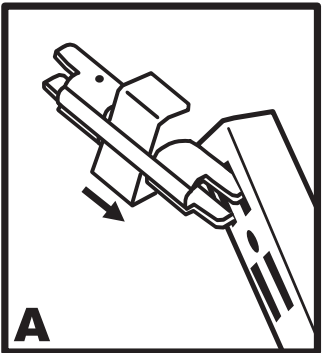


Slide one end of Wallstrip connector into top two notches of short Wallstrip.

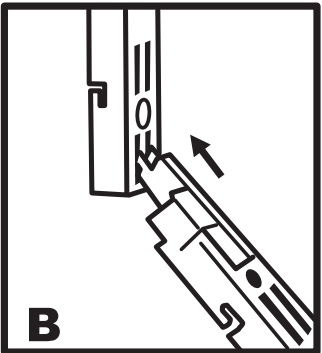


Slide other end of the Wallstrip connector into the bottom two notches of the long Wallstrip. Use a spirit level to position the short Wallstrip and mark the position of the top and bottom screw holes.

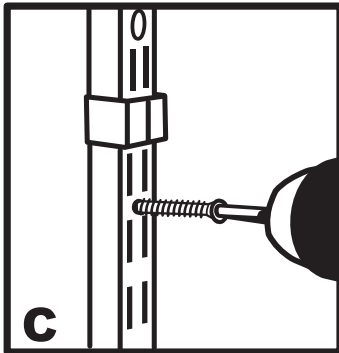

Drill a pilot hole and fasten both screws. (Use wall anchors if there is no stud). To position the second Wallstrip Extension, use Track Cover to ensure proper spacing from the first Wallstrip Extension.

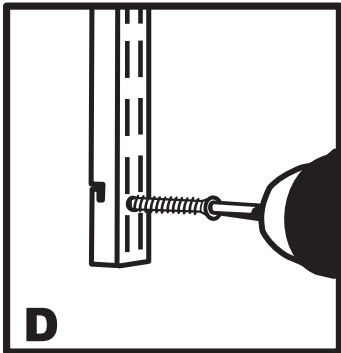

4 Install Brackets & Adjustable Shelves

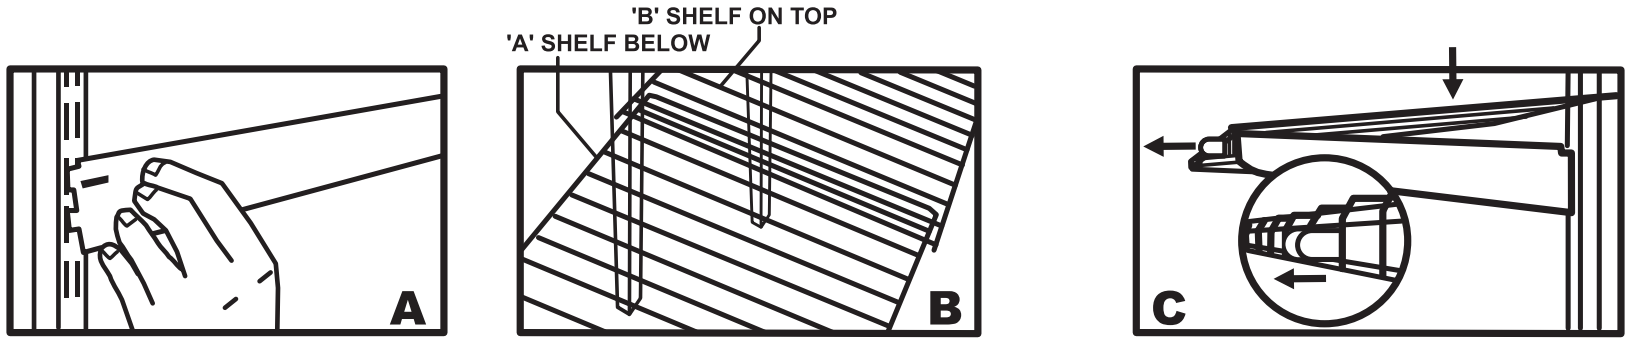


Insert Brackets into Uprights at desired locations. **NOTE:** Install Brackets and shelving at the top first and work down. Brackets will not fit into upper slot of each Upright.

Shelves are fully adjustable and require no cutting. To adjust width, overlap the shelves making sure the shelf labelled A is placed first on the Brackets and the shelf labelled B is placed ON TOP of A.


Make sure the Bracket locks are unlocked (the plastic locking clip should be in a vertical position - upright) and install shelving making sure that the 'nose' of the Bracket is projecting out through the front edge of the shelf. **NOTE:** For maximum weight capacity, do not insert Bracket into bottom slots of Upright.

**IMPORTANT:** Regardless of overall shelf length, when overlapping sections of shelving, shelves labelled A must be placed onto Brackets before shelves labelled B.

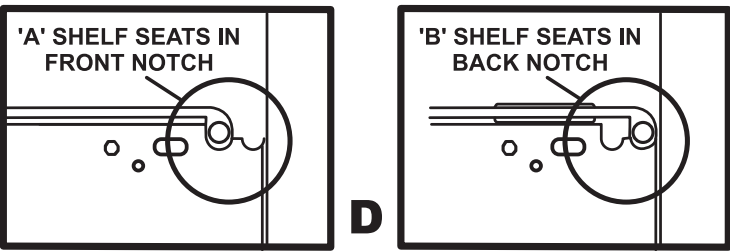


Shelf labelled A sits in front notch of Bracket. Shelf labelled B sits in back notch. Be sure each shelf slides back as far as possible before locking shelves into Brackets.

**WARNING!**  
If shelves are installed in the incorrect notch, the front of the shelves may fall off the Bracket.  
If overlapping 3 sections of shelving, use two A section and one B section, placing A sections on the outside and gapping the bridge with the B section. For 4 or more overlapping sections, continue alternating between A and B sections, placing A shelves on Brackets before B shelves.

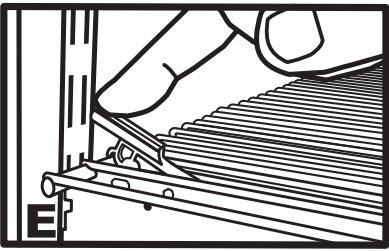

After all shelves are positioned properly, lock shelves into Brackets by pressing down on the plastic locking clip.

5 Install Adjustable Clothes Rods

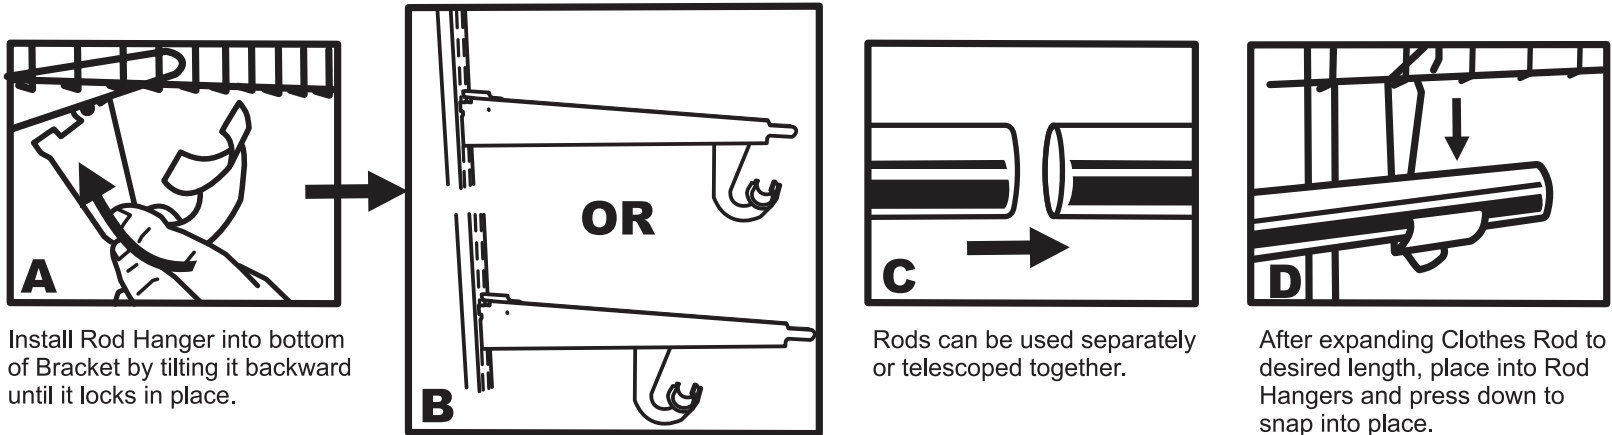

Install Rod Hanger into bottom of Bracket by tilting it backward until it locks in place.

**NOTE:** Rod Hanger can be fixed to either of the 2 sets of slots in Bracket, depending on depth of closet cavity.

Rods can be used separately or telescoped together.

After expanding Clothes Rod to desired length, place into Rod Hangers and press down to snap into place.

Fully Adjustable System

- Shelves and Clothes Rods can be adjusted or reconfigured anywhere on this system to meet your storage needs.
- Additional configurations can be created by overlapping shorter shelves to create longer shelves.
- Change your closet design seasonally to better accommodate summer or winter clothing.

Accessories

All parts are available separately to add to or alter your requirements. These are available from your Clever Closet stockist:

- Clever Sliding Basket
- Clever Pants Rack
- Clever Hanging Storage

