

# **COSTWAY**®

**ITEM NO.:HW56023** 


# ASSEMBLY INSTRUCTIONS DRESSING TABLE

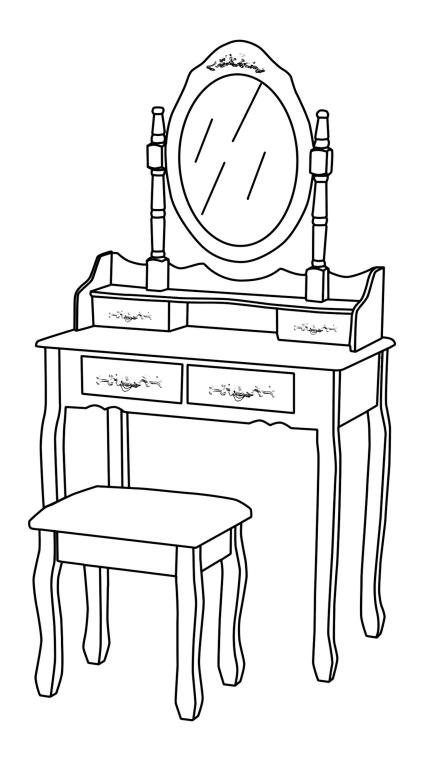

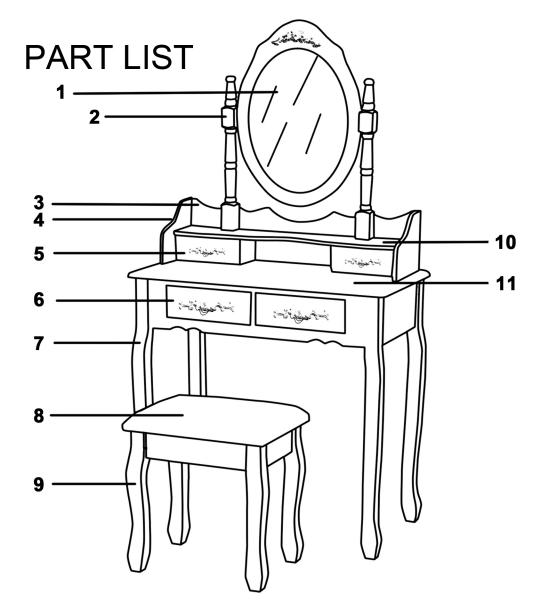


_						
	NO	DESCRIPTION	QUANTITY	NO	DESCRIPTION	QUANTITY
	1	MIRROR	1	7	TABLE LEG	4
	2	MIRROR FIXTURE	2	8	CUSHION	1
	3	BOARD	1	9	STOOL LEG	4
	4	BOARD	2	10	BOARD	1
	5	SMALL DRAWER	2	11	TABLE BODY	1
	6	MAIN DRAWER	2			

#### HARDWARE LIST

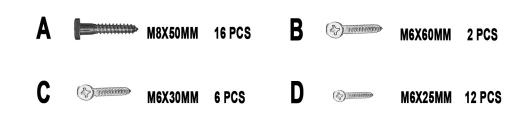


**ALLEN WRENCH 1 PC** 

#### STEP 1

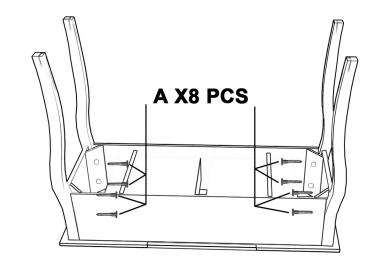


USE SCREWS (A) TO ATTACH THE TABLE BODY (11) TO THE TABLE LEGS(7)

#### STEP 2

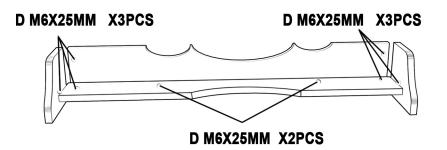


USE SCREWS (D) TO CONNECT BOARD (3) BOARD (4) AND BOARD (10) TOGETHER

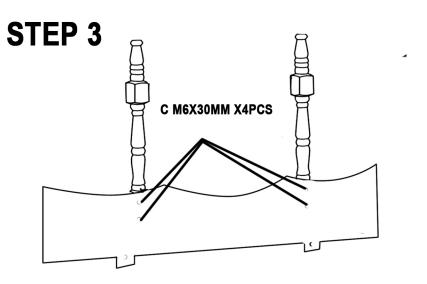


USE SCREW (C) TO CONNECT STEP2 WITH THE COMPLETED PART OF THE SECOND STEP

### STEP 4

USE SCREWS C AND D TO CONNECT THE TABLE BODY (11) AND THE THIRD STEP OF THE ASSEMBLED PARTS.

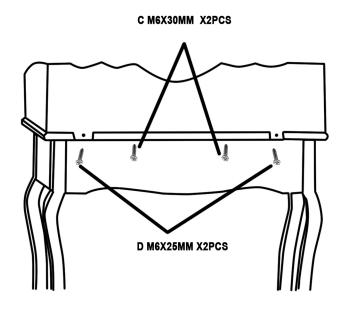


### STEP 6

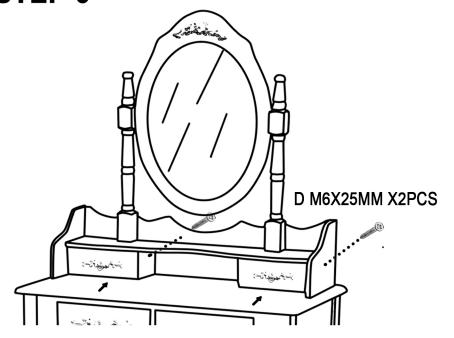

PLEASE THE SMALL DRAWER IN THE POSITION SHOWN AND ATTACH IT TO THE ASSEMBLED PART IN STEP 5 WITH THE SCREW (D)


#### STEP 8

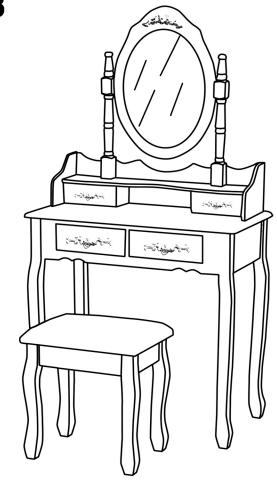

**FINISH** 


## STEP 5

**USE SCREW B TO CONNECT MIRROR FIXTURE (2)** 

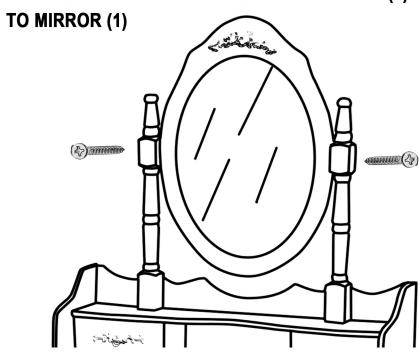

B M6X60MM X2PCS

# STEP 7

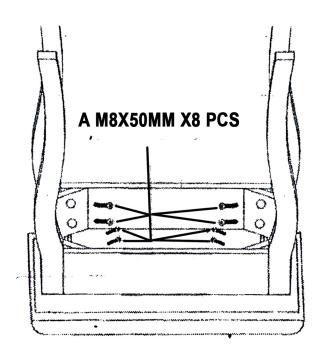

**USE SCREW (A) TO CONNECT STOOL LEGS AND STOOL** 



**ITEM NO.:HW56023**