

EN

DE

FR

ES

IT

PL


COSTWAY®



**Please give us a chance to make it right and do better !**

Contact our friendly customer service department for help first.  
Replacements for missing or damaged parts will be shipped ASAP !

US office: Fontana    UK office: Ipswich    AU office: Truganina

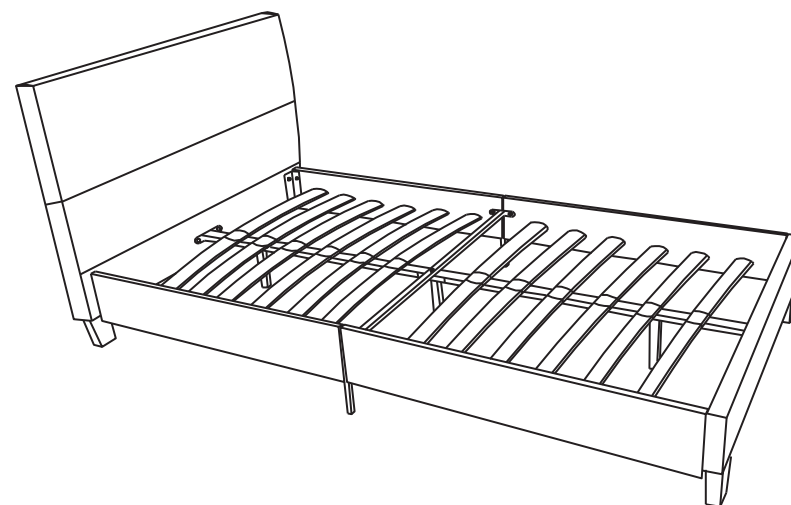

## Contact Us !

**Do NOT return this item.**

Contact our friendly customer service department for help first.



US: cs.us@costway.com

UK: cs.uk@costway.com

AU: cs.au@costway.com

## USER'S MANUAL





### Bed Frame HU10162

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.




## Before You Start

- ⚠ Read each step carefully before starting. It is very important to ensure each step followed in correct order, otherwise assembly difficulties may occur.
- ⚠ Most of board parts are labeled or stamped on the raw edges. Have a check to make sure all parts are included.
- ⚠ Work in a spacious area, preferably on a carpet close to where the unit will be used.
- ⚠ Keep the handtools close at hand. Do not use power tools to assemble your furniture. They may scratch or damage the parts.

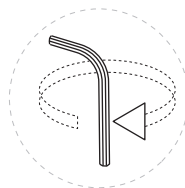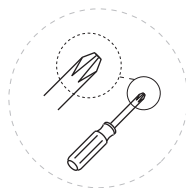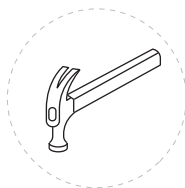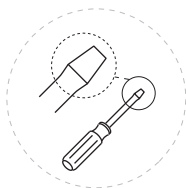

## ASSEMBLY INSTRUCTION

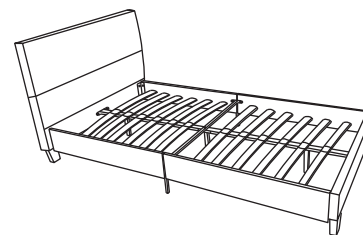

**Do not skip any step**

**Do not tighten any bolts before all the parts have been assembled ,except for step1 and step2.**


## PART LIST



P1 X 1pc



P2 X 1pc



P3 X 1pc



P4 X 2pcs



P5 X 2pcs



P6 X 2pcs



P7 X 1pc



P8 X 2pcs



P9 X 4pcs



P10 X 2pcs  
(short)



P11 X 2pcs  
(long)



P12X 1pc



P13 X 12pcs



P14 X 24pcs




P15 X 2pcs

## HARDWARE LIST




A X 20pcs  
M8 X 15mm



B X 4pcs  
M8 X 30mm



C X 11pcs  
M8 X 25mm



D X 7pcs  
M8 X 60mm



I X 7pcs  
M8 Flat  
washer



E X 9pcs  
M8 Nut



F X 1pc  
Allen Key




G X 1pc  
Spanner




H X 4pcs  
M8 x 40mm


## Step 1

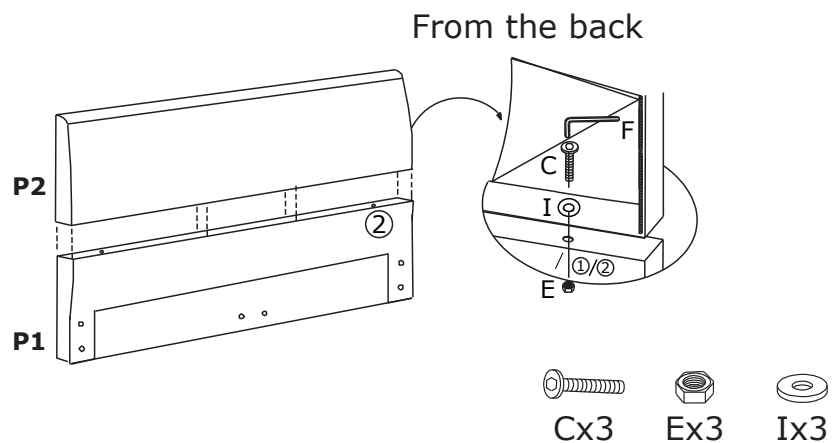


## Step 2

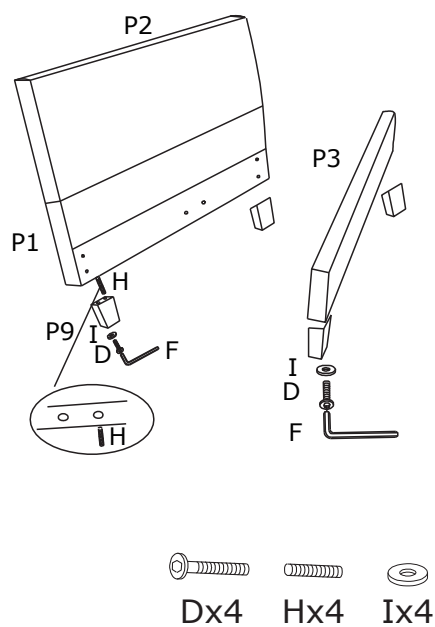

## Step 3

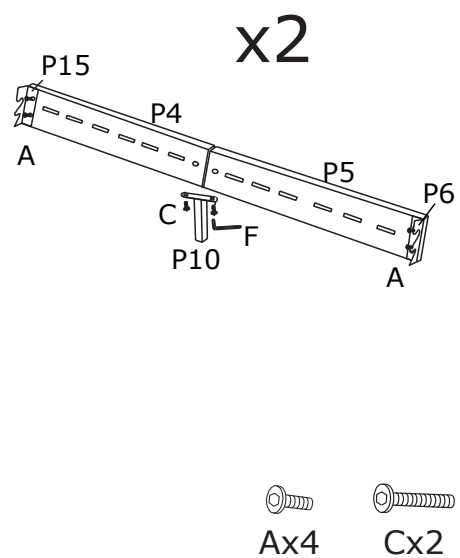


## Step 4

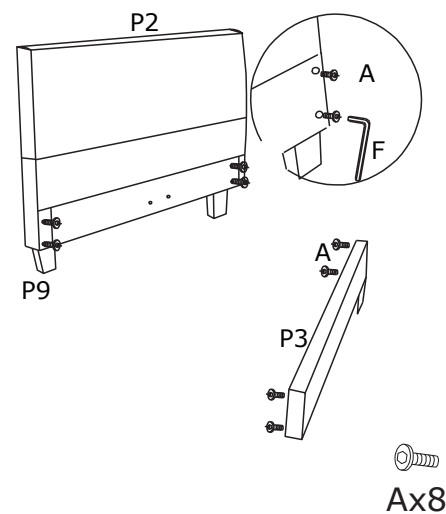


## Step 5


Hang it on the headboard first, and then tighten the screws.




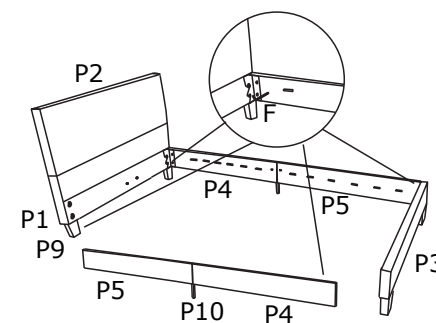


## Step 6

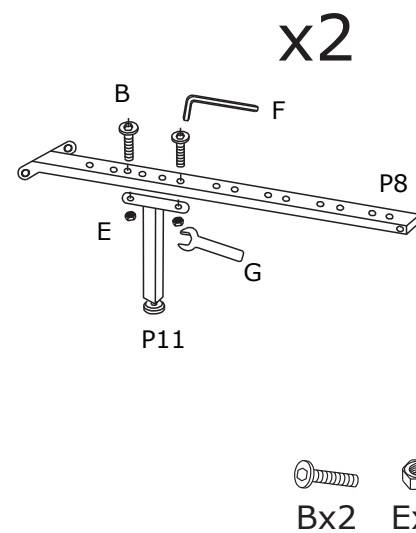

## Step 7

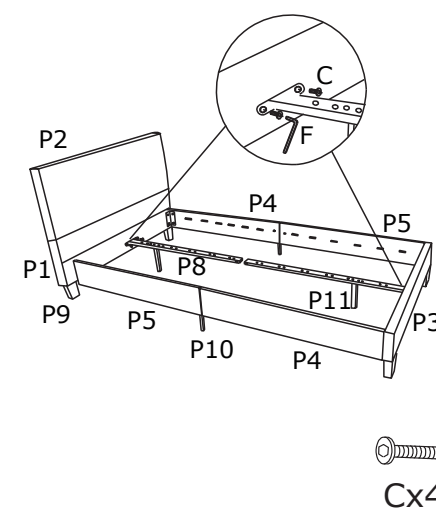

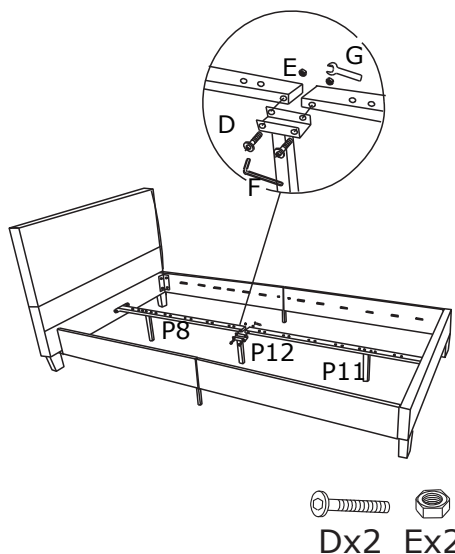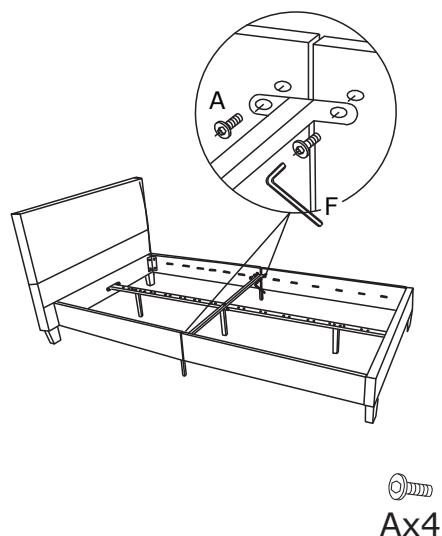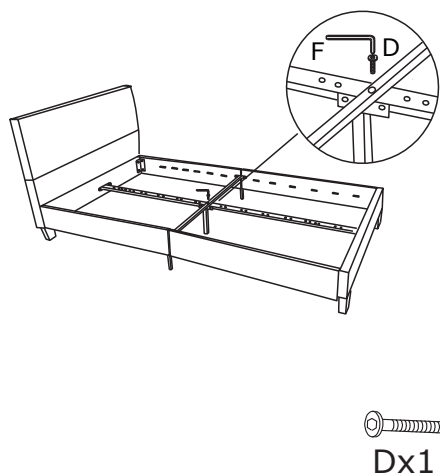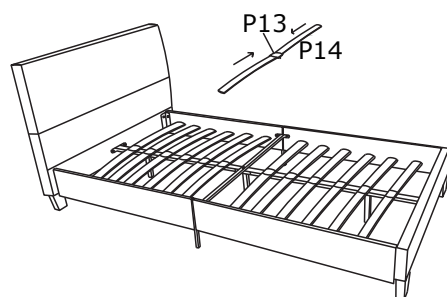**Step 8****Step 9****Step 10****Step 11****Care and Maintenance**

Use a soft, clean cloth that will not scratch the surface when dusting.

Use of furniture polish is not necessary.

Should you choose to use polish, test first in an inconspicuous area.

Using solvents of any kind on your furniture may damage the finish.

Never use water to clean your furniture as it may cause damage to the finish.

Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.

Check bolts/screws periodically and tighten them if necessary.

**Further advice about wood furniture care**

It is best to keep your furniture in a climate-controlled environment.

Extreme temperature and humidity changes can cause fading, warping, shrinking and splitting of wood.

It is advised to keep furniture away from direct sunlight as sun may damage the finish.

Proper care and cleaning at home will extend the life of your purchase.

Following these important and helpful tips will enhance your furniture as it ages.