















## **USER'S MANUAL**

---


















**Console Table**  
**HW64005**

# PRODUCT ASSEMBLY


## Hardware List

A	 6*35mm	48 pcs	F	 4*30mm	8 pcs	K	 	4 pcs
B	 15*10mm	48 pcs	G	 4*35mm	4 pcs	L	 4*16mm	4 pcs
C	 8*30mm	40 pcs	H	 	2 pcs	M	 	4 pcs
D	 3*12mm	34 pcs	I	 	2 pcs	N	 300mm	2 sets
E	 3*14mm	4 pcs	J	 2.5*12mm	16 pcs			

## Parts List


1	Top Panel		1 pc	10	Connect Bar		3 pcs
2	Left Panel		1 pc	11	Middle Back Connect Bar		1 pc
3	Right Panel		1 pc	12	Drawer Front Panel		2 pcs
4	Left Divide Panel		1 pc	13	Drawer Left Panel		2 pcs
5	Right Divide Panel		1 pc	14	Drawer Right Panel		2 pcs
6	Left Door		1 pc	15	Drawr Back Panel		2 pcs
7	Right Door		1 pc	16	Drawer Bottom Panel		2 pcs
8	Middle Shelf		1 pc	17	Back Panel		1 pc
9	Bottom Shelf						

Part List Assembly Overview

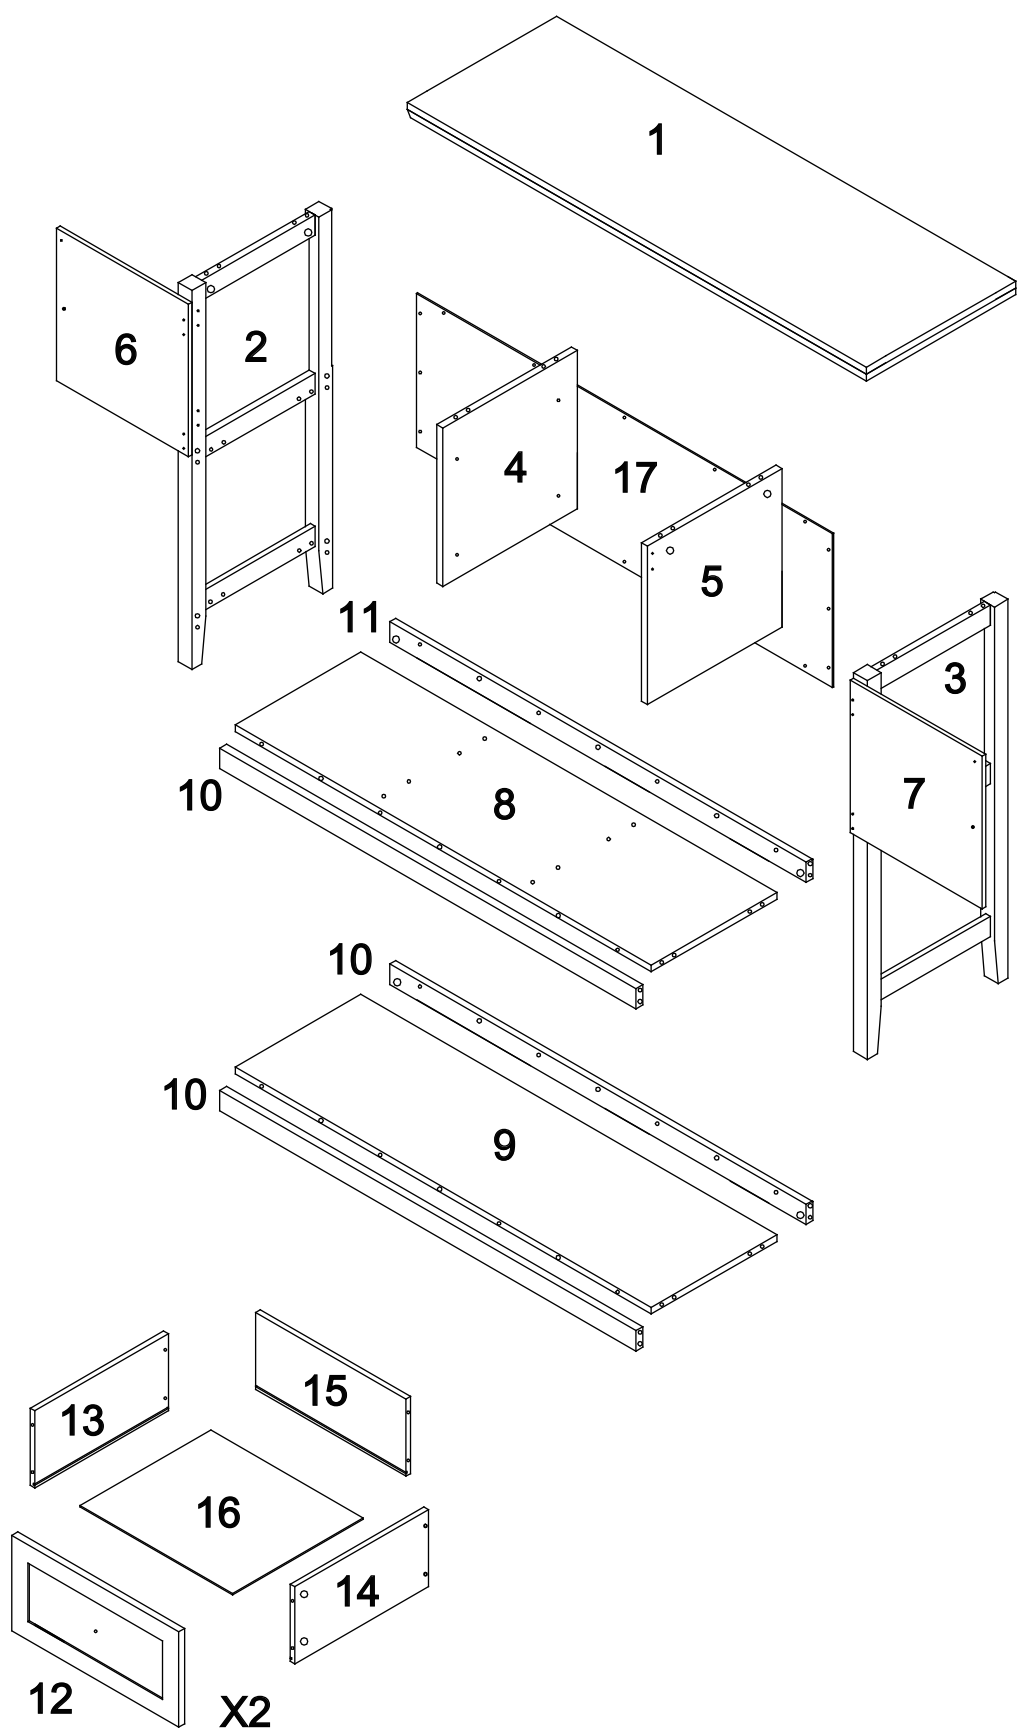

# PRODUCT ASSEMBLY


## Step 1

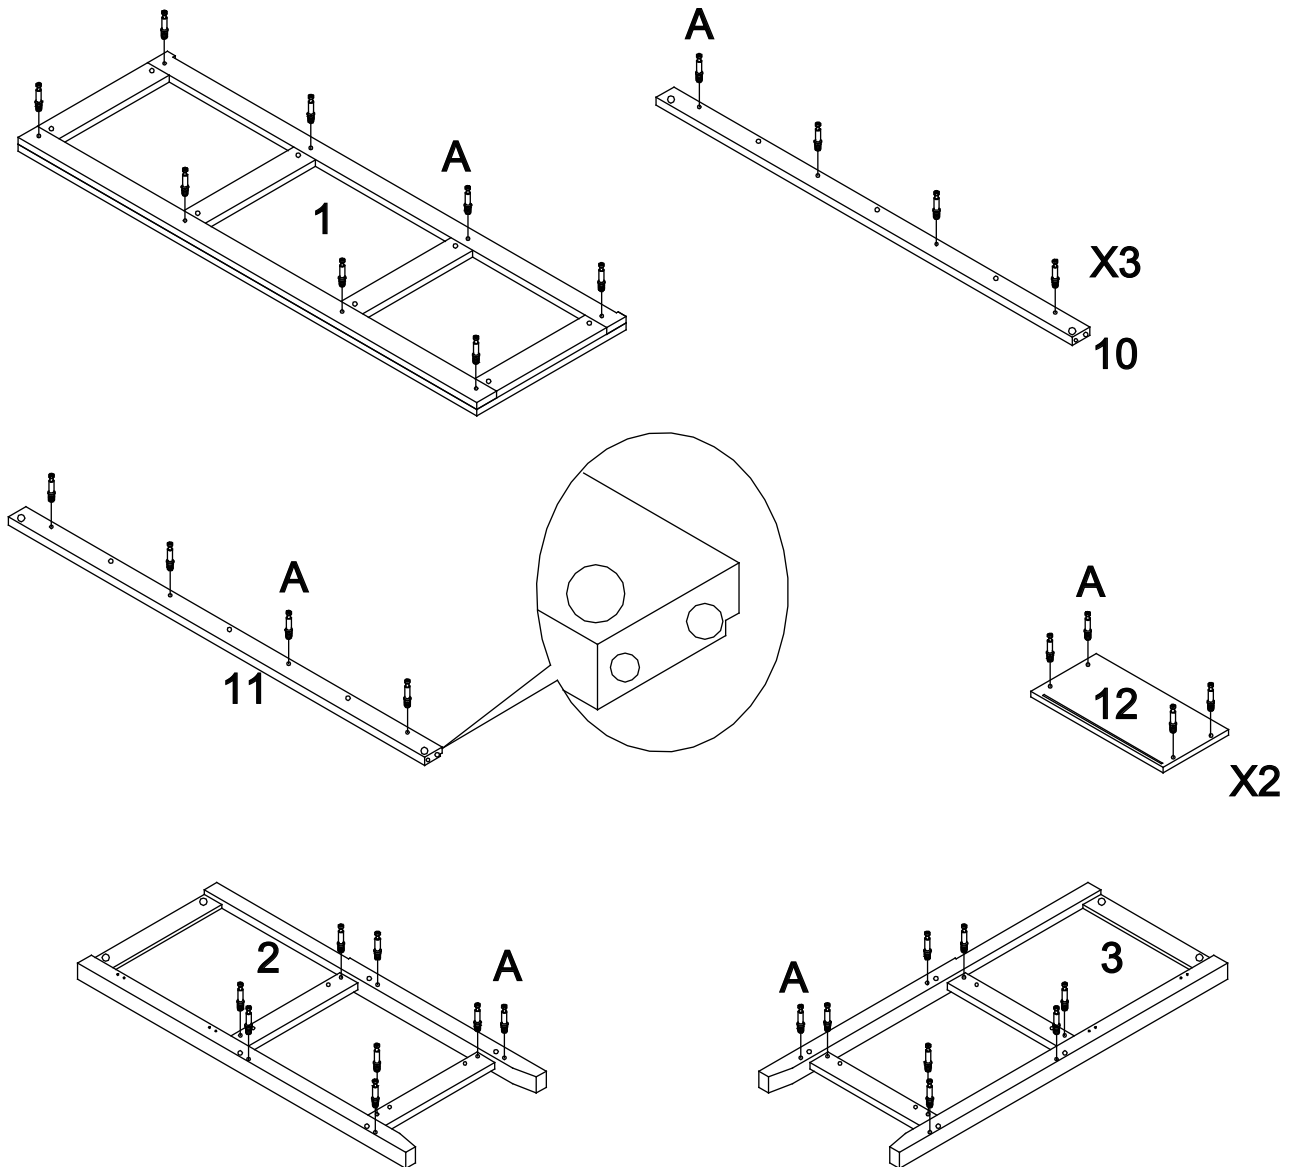
**A****48 pcs**

- 1) Lay Top Panel (1), Connect Bar (10), Middle Back Connect Bar (11), Drawer Front Panel (12), Left panel (2) and Right Panel (3) as shown on a flat and soft surface that does not scratch the parts.
- 2) Screw Cam-bolt (A) into the designated holes on each .

# PRODUCT ASSEMBLY

## Step 2

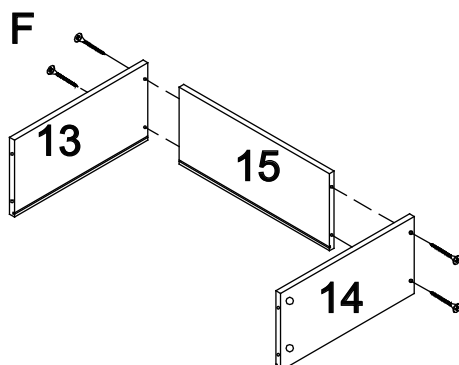


F		8 pcs
---	---	-------




X2

Attach Drawer Side Panel (13 & 14) to Drawer Back Panel (15) by using Screw (F).

## Step 3



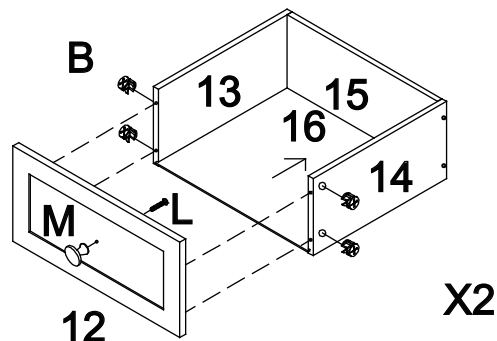B		8 pcs
L		2 pcs
M		2 pcs




X2

- 1) Insert Drawer Back Panel (16) as per the groove on (13, 14 & 15).
- 2) Attach Drawer Front Panel (12) to (13 & 14) via Cam-bolt on (12).
- 3) Insert Cam-lock (B) to the designated holes on (13 & 14) then turn clock-wise to lock onto Cam-bolt.

## Step 4

N2		2 sets
D		8 pcs

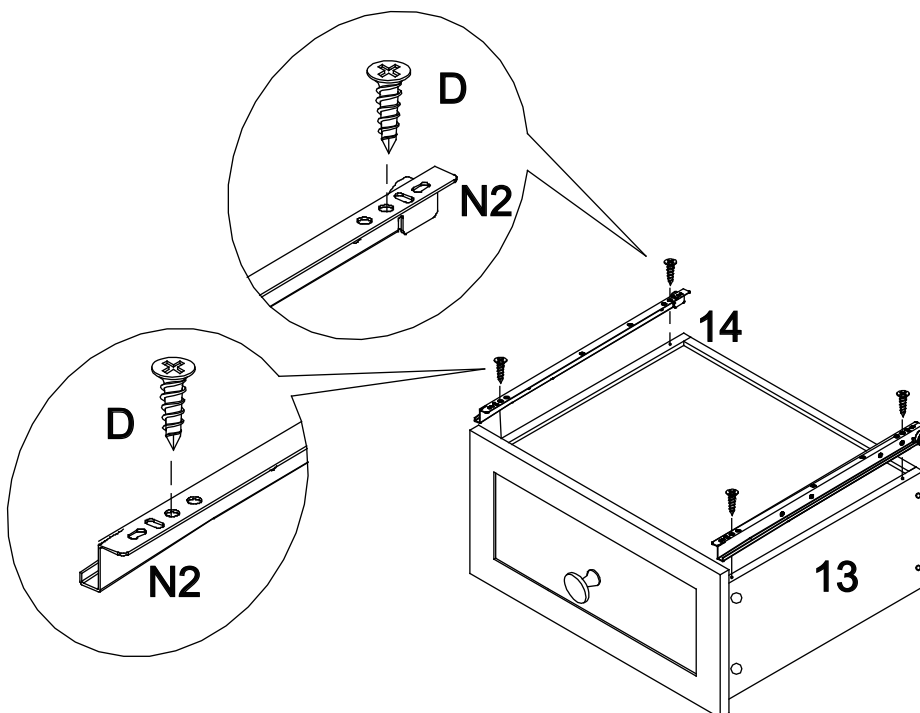




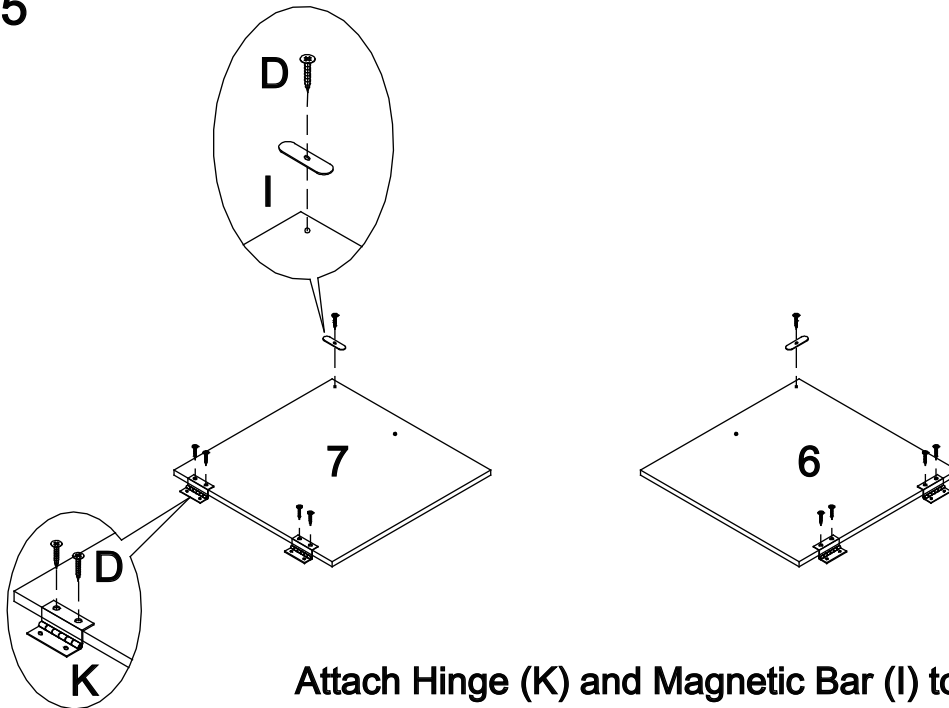
X2

Attach Drawer Glide (N2) to Drawer Side Panel (13 & 14) by using Screw (D).

# PRODUCT ASSEMBLY



## Step 5


D		10 pcs
I		2 pcs
K		4 pcs



Attach Hinge (K) and Magnetic Bar (I) to Door (6 & 7) by using Screw (D) as shown.

## Step 6

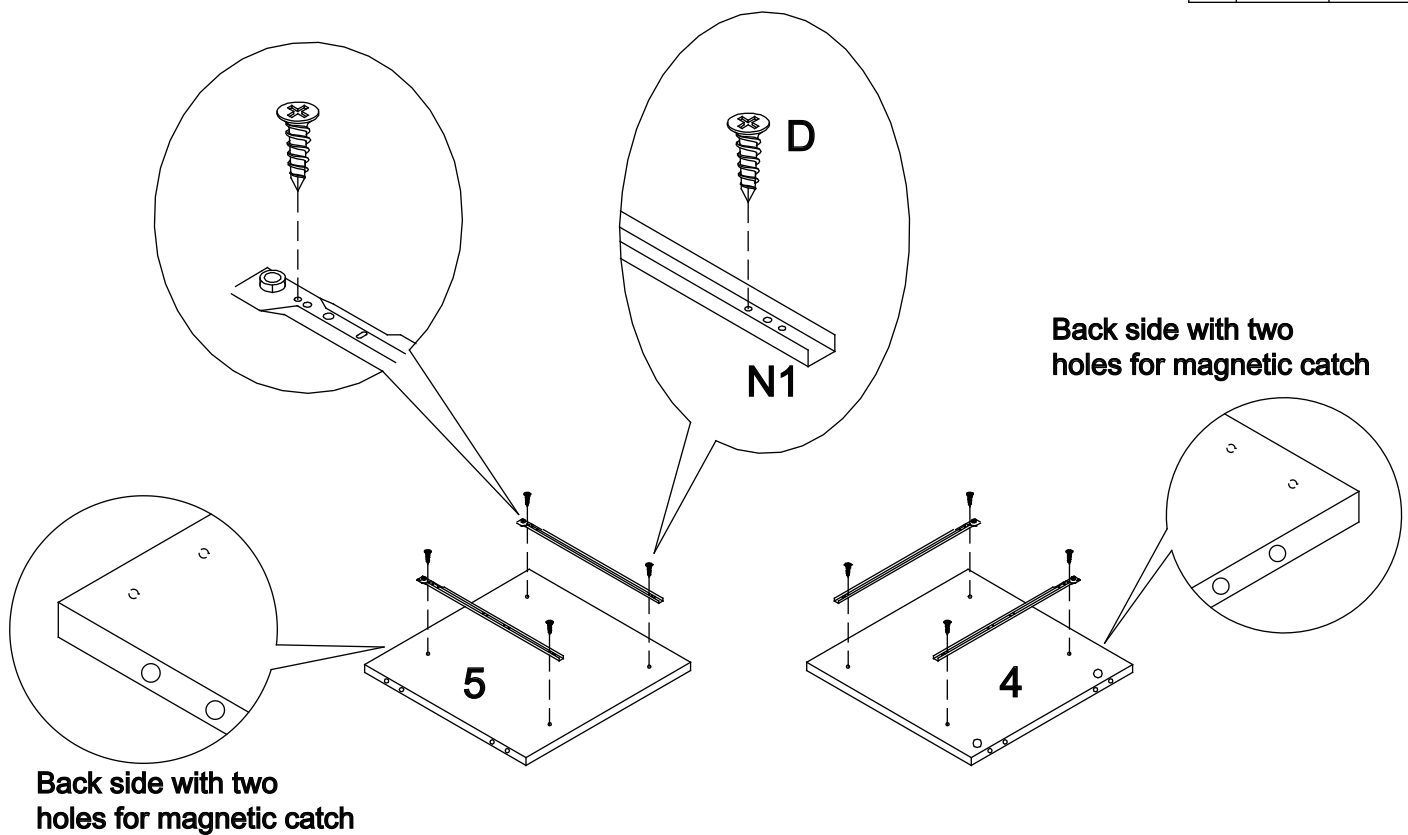

D		8 pcs
N1		2 sets




Attach Drawer Glide (N1) to Left and Right Divide Panel (4 & 5) by using Screw (D).

## PRODUCT ASSEMBLY



### Step 7

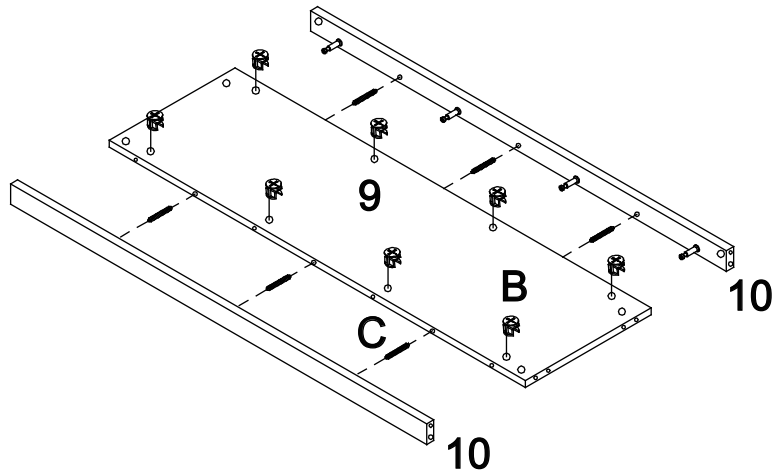
B		8 pcs
C		6 pcs



- 1) Attach Connect Bar (10) to Bottom Shelf (9) via Wood Dowel (C) and Cam-bolt on (10).
- 2) Insert Cam-lock (B) to the designated holes on (9) then turn clock-wise to lock onto Cam-bolt.

### Step 8

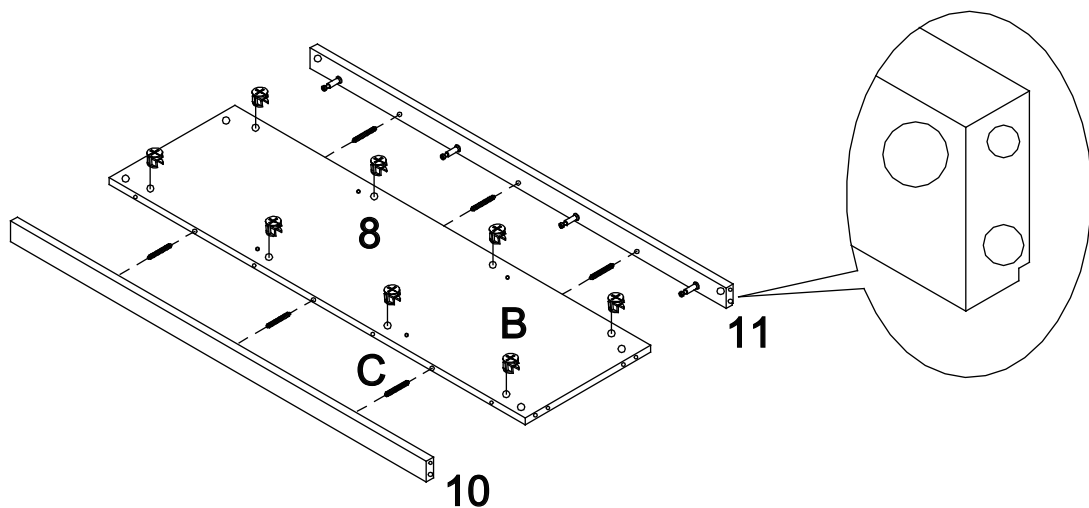

B		8 pcs
C		6 pcs




- 1) Attach Connect Bar (10 & 11) to Middle Shelf (8) via Wood Dowel (C) and Cam-bolt on (10 & 11).
- 2) Insert Cam-lock (B) to the designated holes on (8) then turn clock-wise to lock onto Cam-bolt.

# PRODUCT ASSEMBLY

## Step 9


B		4 pcs
C		4 pcs

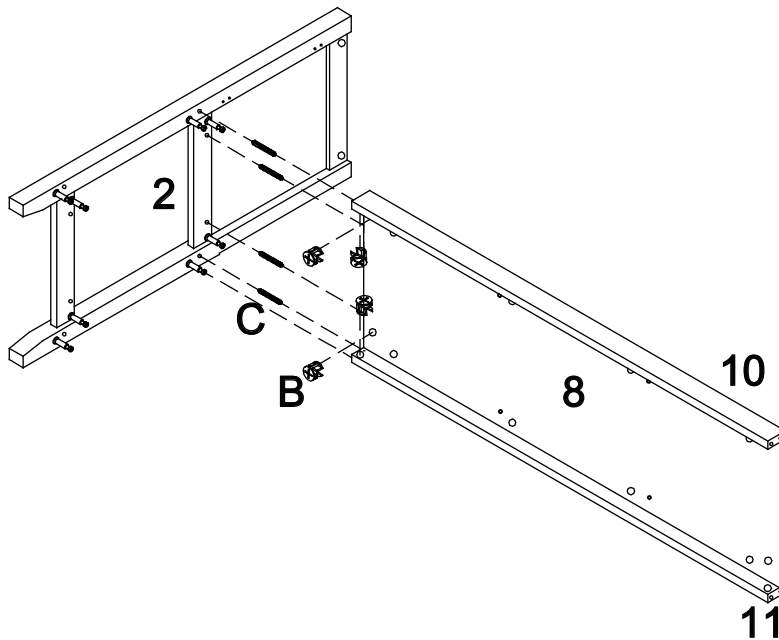

- 1) Attach (8, 10 & 11) to Left Panel (2) via Wood Dowel (C) and Cam-bolt on (2).
- 2) Insert Cam-lock (B) to the designated holes on (8, 10 & 11) then turn clock-wise to lock onto Cam-bolt.

## Step 10

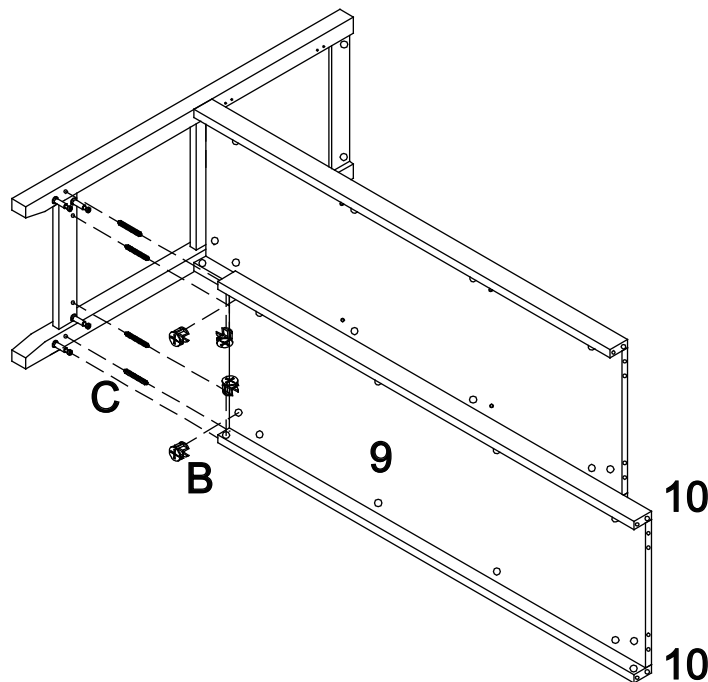

B		4 pcs
C		4 pcs




- 1) Attach (9 & 10 ) to Left Panel (2) via Wood Dowel (C) and Cam-bolt on (2).
- 2) Insert Cam-lock (B) to the designated holes on (9 & 10) then turn clock-wise to lock onto Cam-bolt.

# PRODUCT ASSEMBLY

## Step 11


B		8 pcs
C		8 pcs

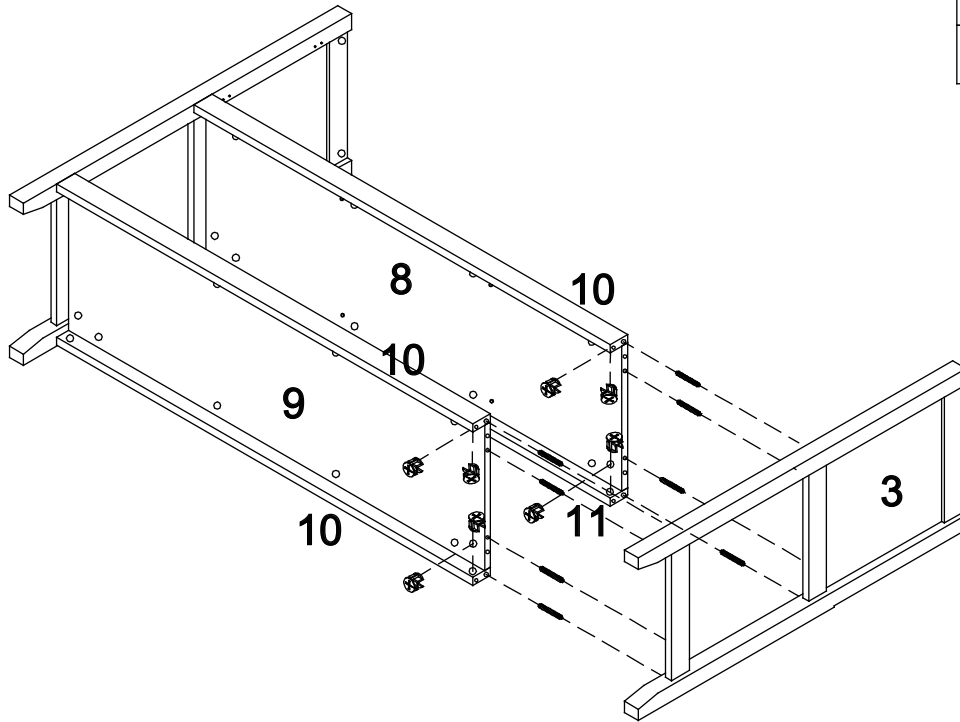

- 1) Attach Right Panel (3) to (8, 9, 10 & 11) via Wood Dowel (C) and Cam-bolt on (2).
- 2) Insert Cam-lock (B) to the designated holes on (8, 9 10 & 11) then turn clock-wise to lock onto Cam-bolt.

## Step 12

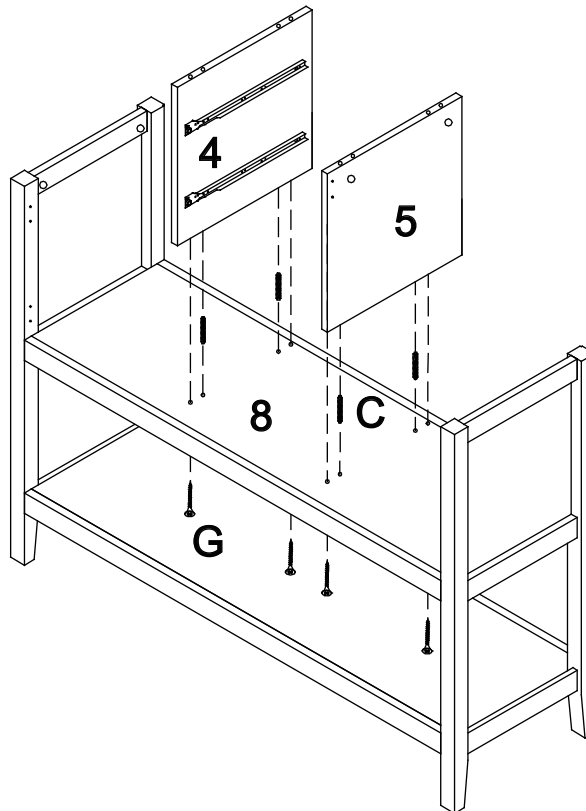

C		4 pcs
G		4 pcs




Attach Left and Right Divide Panel (4 & 5) to Middle Shelf (8) by using Wood Dowel (C) and Screw (G).

## PRODUCT ASSEMBLY

### Step 13


B		8 pcs
C		8 pcs

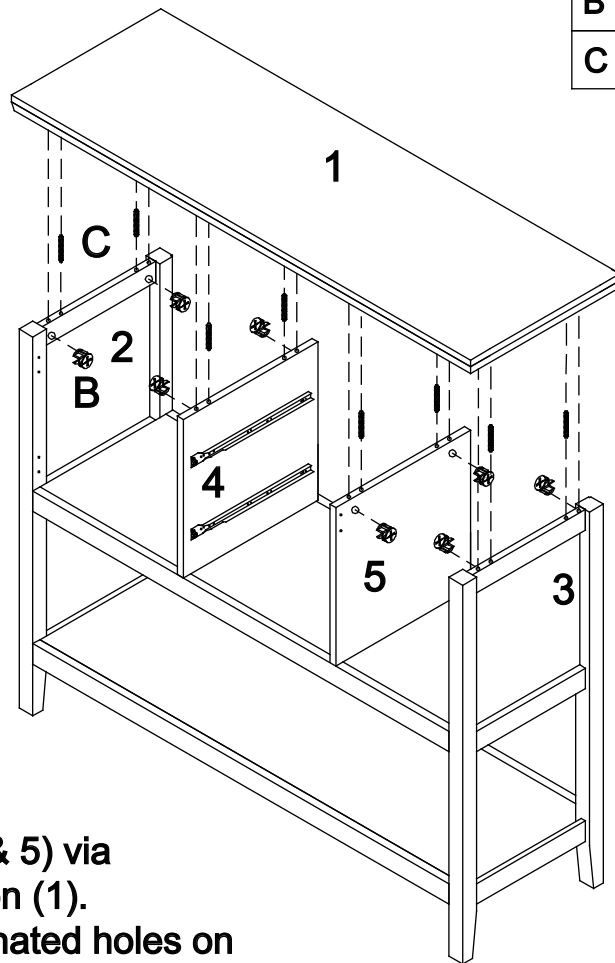

- 1) Attach Top Panel (1) to (2, 3, 4 & 5) via Wood Dowel (C) and Cam-bolt on (1).
- 2) Insert Cam-lock (B) to the designated holes on (2, 3 4 & 5) then turn clock-wise to lock onto Cam-bolt.

### Step 14


J		16 pcs
---	---	--------

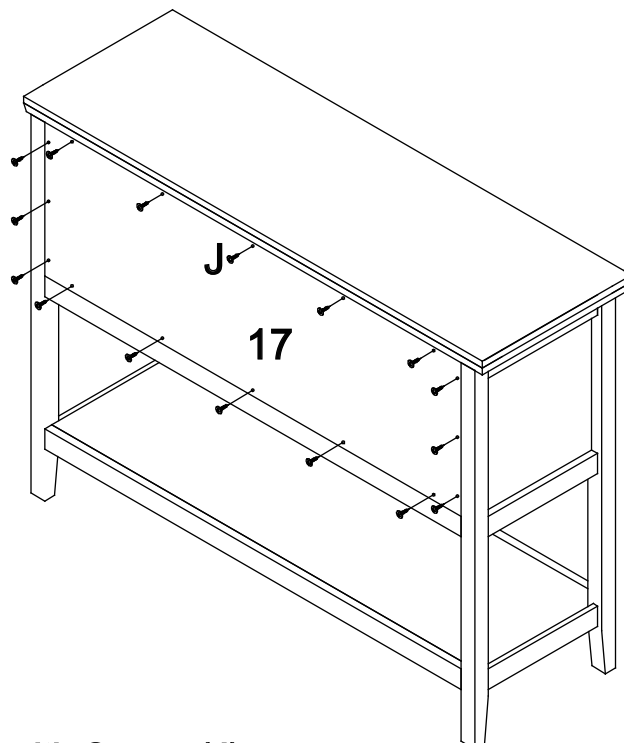

Attach Back Panel (17) with Screw (J).

# PRODUCT ASSEMBLY


## Step 15

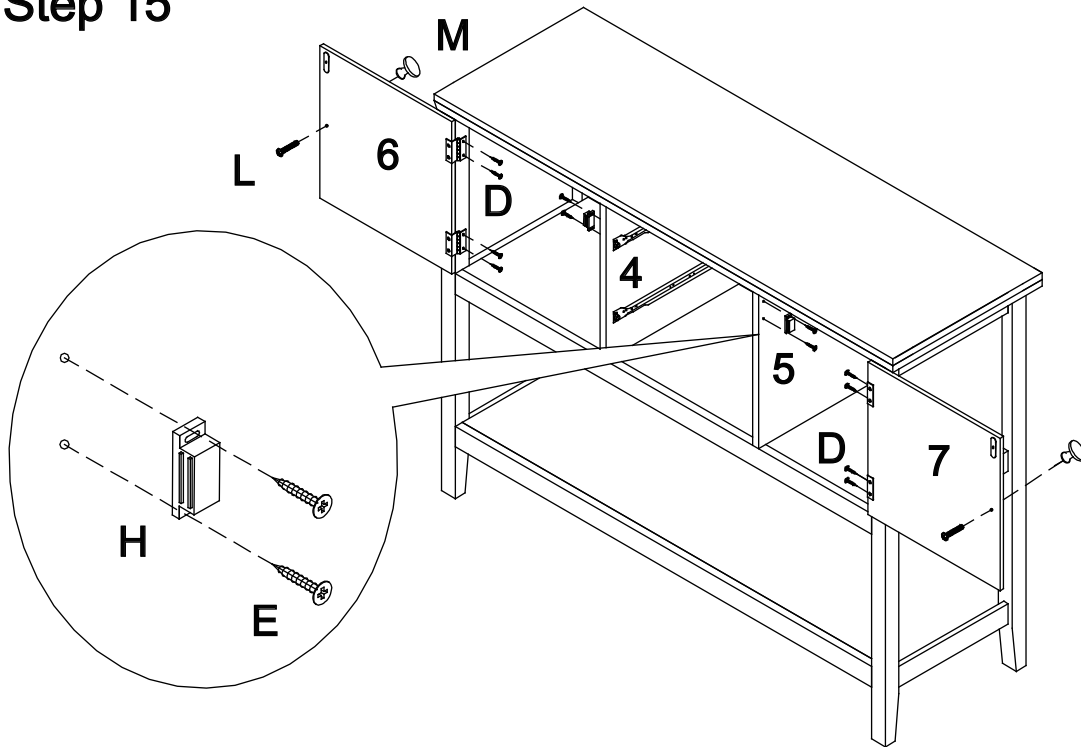

D		8 pcs
E		4 pcs
H		2 pcs
L		2 pcs
M		2 pcs

- 1) Attach Magnetic Catch (H) to Divide Panel (4 & 5) with Screw (E).
- 2) Attach Door (6 & 7) to Side Panel with Screw (D).
- 3) Attach Knob (M) to Door (6 & 7) with Knob Bolt (L).

## Step 16

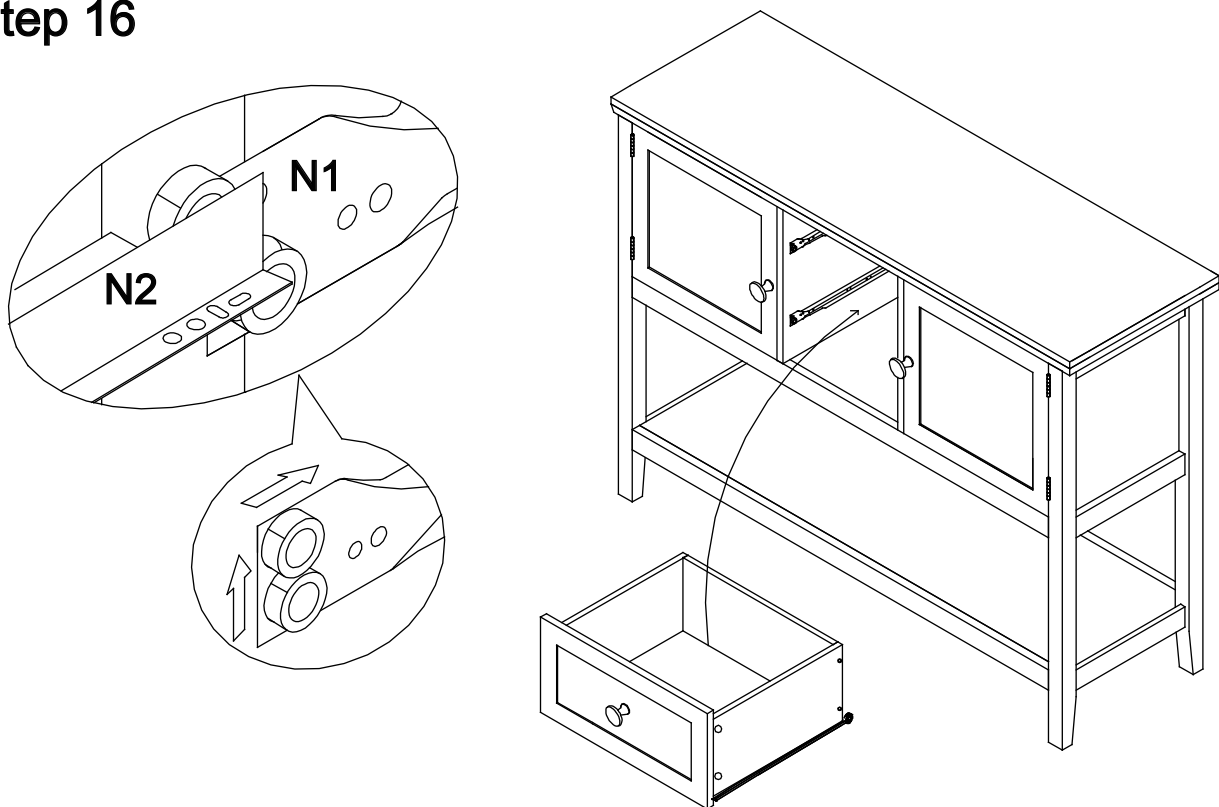

Insert Drawers.



#### TIPS:

Your suggestions and comments for Costway are really important to us!  
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2018

Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, Costway will be more consistent to offer you  
**EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!**

US office:Fontana

UK office:Ipswich

