









USER'S MANUAL

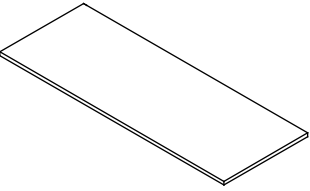

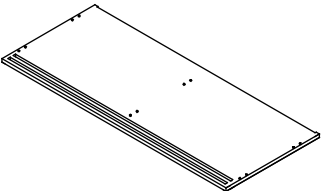
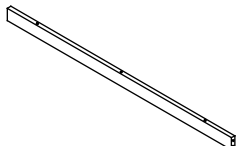
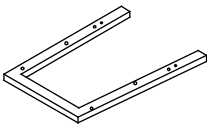
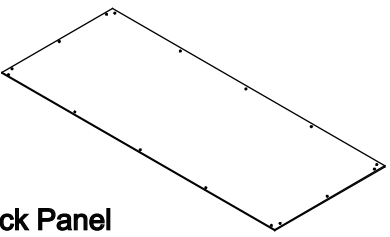
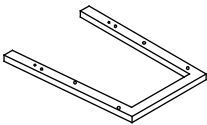
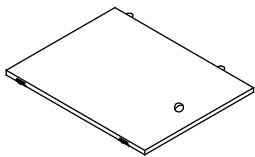

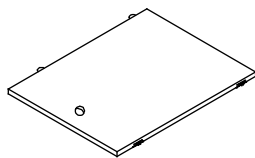

**TV Stand
HW64004**

PRODUCT ASSEMBLY


Hardware List

A	 6*35mm	10 pcs	D	 4*35mm	6 pcs	G	 6*35mm	8 pcs
B	 15*10mm	10 pcs	E	 4*45mm	6 pcs	H		1 pc
C	 6*30mm	20 pcs	F	 2.5*12mm	16 pcs			

Parts List


1	 Top Panel	1 pc	7	 Divide Panel	1 pc
2	 Bottom Panel	1 pc	8	 Connect Bar	2 pcs
3	 Left Leg	1 pc	9	 Back Panel	1 pc
4	 Right Leg	1 pc	10	 Left Door	1 pc
5	 Left Panel	1 pc	11	 Right Door	1 pc
6	 Right Panel	1 pc			

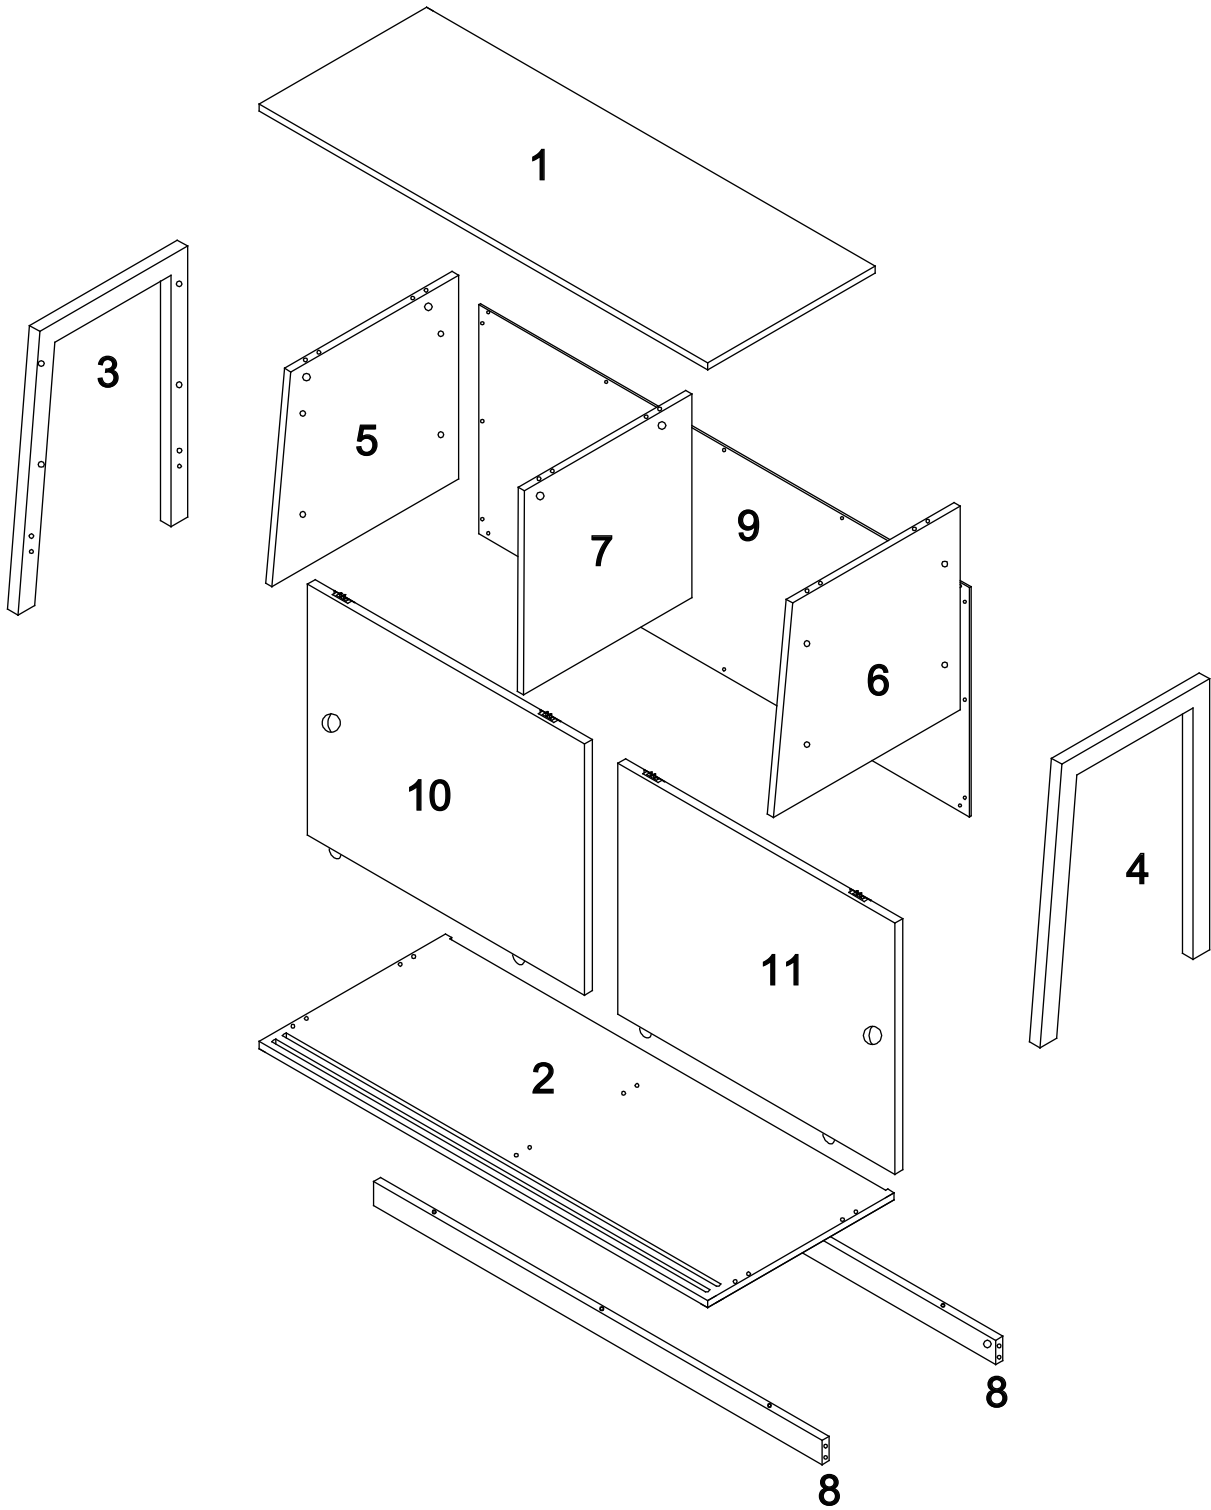Part List Assembly Overview




PRODUCT ASSEMBLY

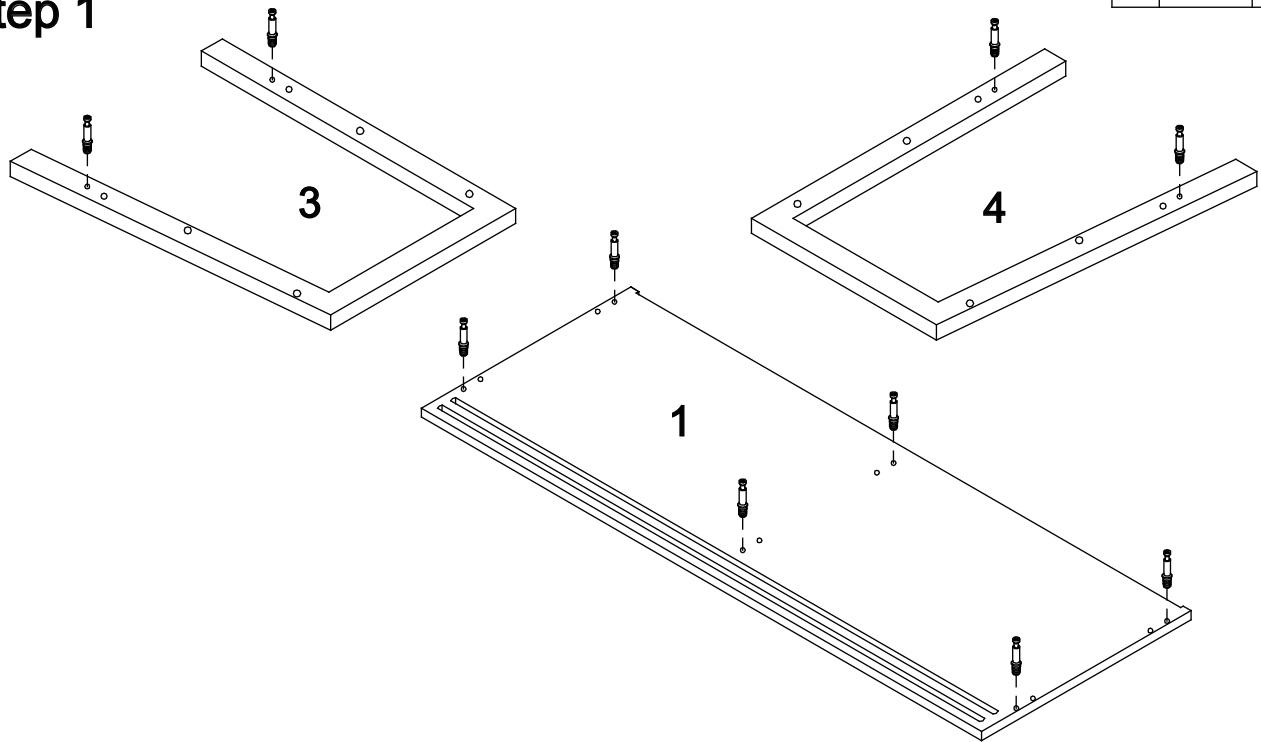Step 1



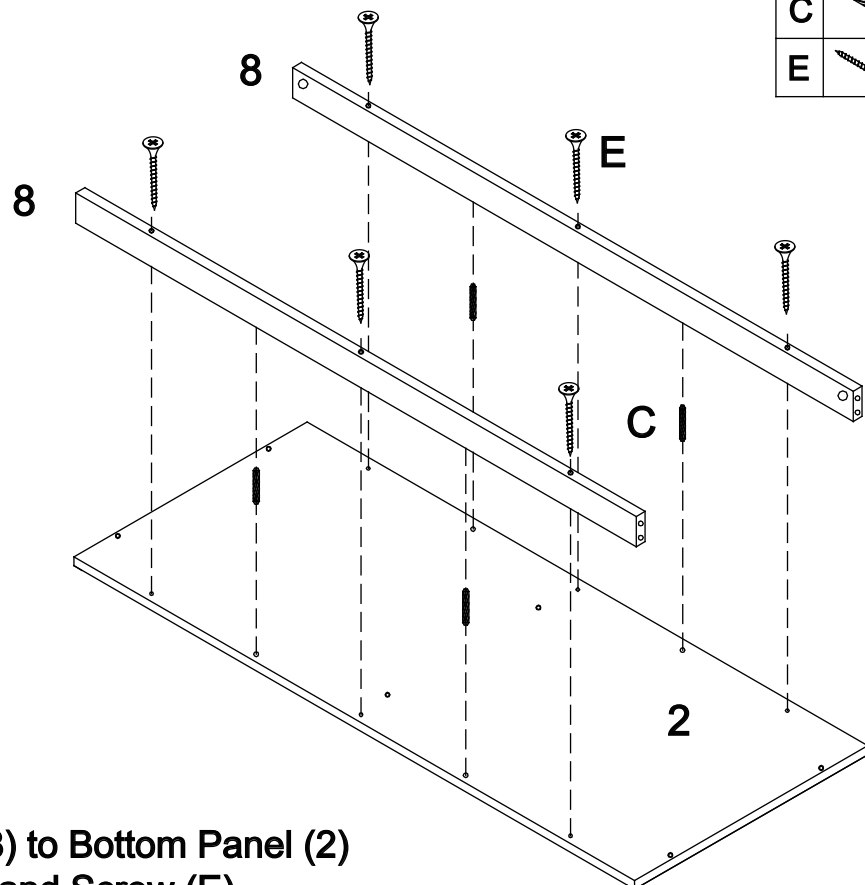- 1) Lay Top Panel (1), Left Leg (3) and Right Leg (4) as shown on a flat and soft surface that does not scratch the parts.
- 2) Screw Cam-bolt (A) into the designated holes on each .



Step 2

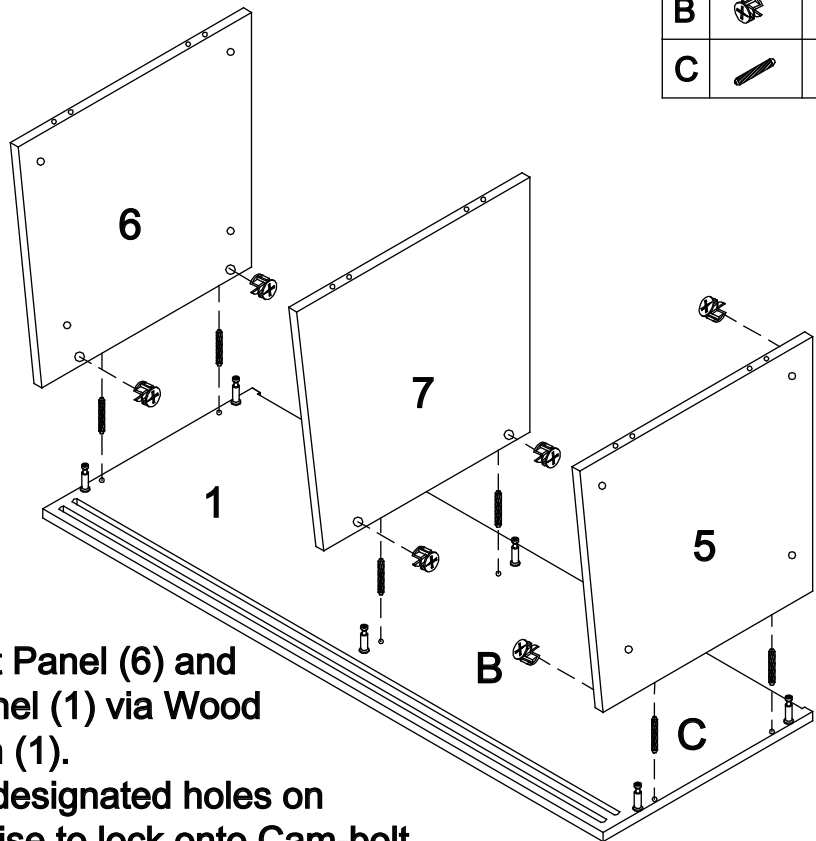


Attach Connect Bar (8) to Bottom Panel (2) with Wood Dowel (C) and Screw (E).

PRODUCT ASSEMBLY



Step 3


B		6 pcs
C		6 pcs



- 1) Attach Left Panel (5), Right Panel (6) and Divide Panel (7) to Top Panel (1) via Wood Dowel (C) and Cam-bolt on (1).
- 2) Insert Cam-lock (B) to the designated holes on (5, 6 & 7) then turn clock-wise to lock onto Cam-bolt.

Step 4


C		6 pcs
D		6 pcs

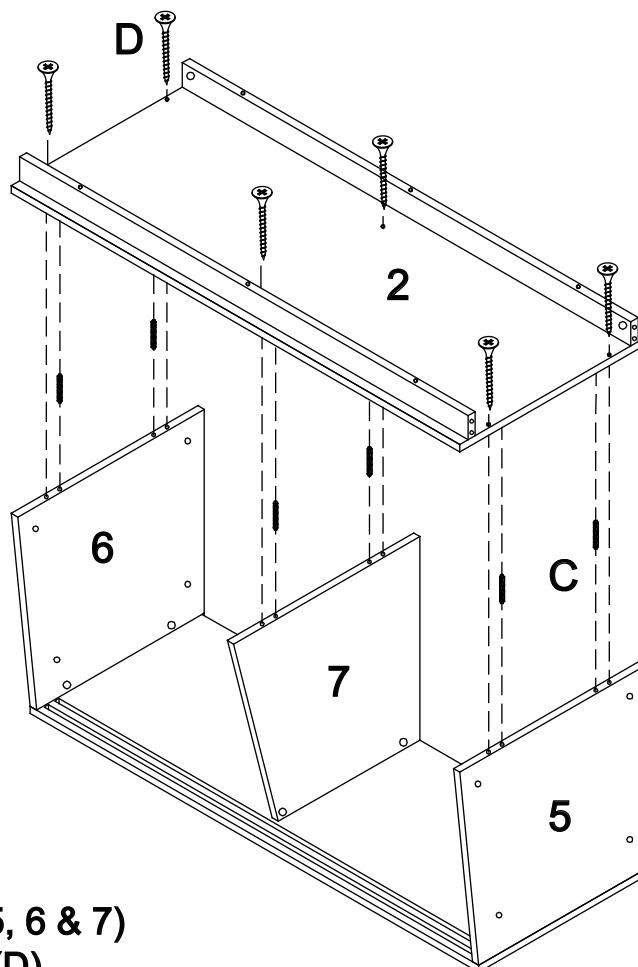

Attach Bottom Panel (2) to (5, 6 & 7) via Wood Dowel and Screw (D).

PRODUCT ASSEMBLY

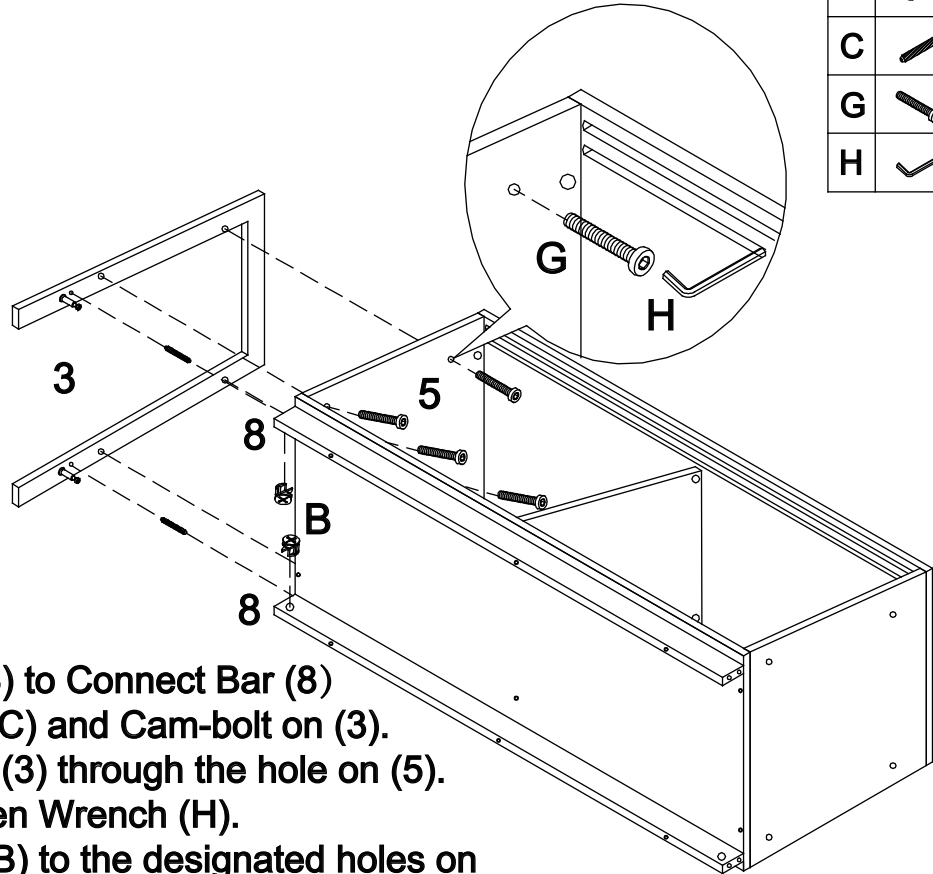
Step 5



B		2 pcs
C		2 pcs
G		4 pcs
H		1 pc

- 1) Attach Left Leg (3) to Connect Bar (8) via Wood Dowel (C) and Cam-bolt on (3).
- 2) Screw Bolt (G) to (3) through the hole on (5). Tighten it with Allen Wrench (H).
- 3) Insert Cam-lock (B) to the designated holes on (8) then turn clock-wise to lock onto Cam-bolt.

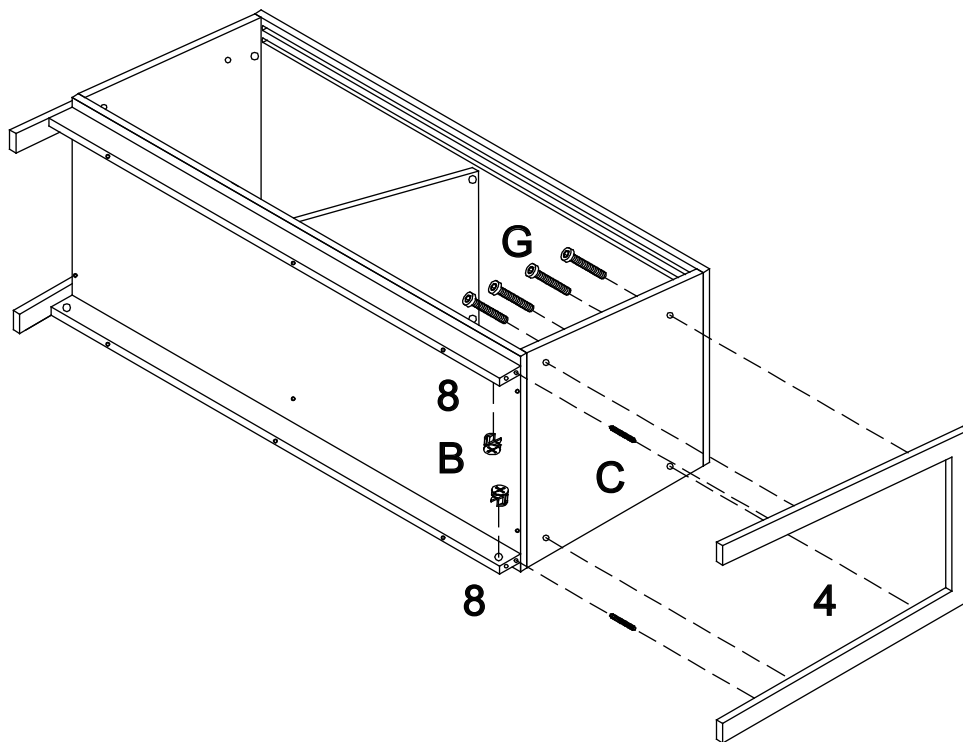Step 6




B		2 pcs
C		2 pcs
G		4 pcs

- 1) Attach Right Leg (4) to Connect Bar (8) via Wood Dowel (C) and Cam-bolt on (4).
- 2) Screw Bolt (G) to (4) through the hole on (5). Tighten it with Allen Wrench (H).
- 3) Insert Cam-lock (B) to the designated holes on (8) then turn clock-wise to lock onto Cam-bolt.


PRODUCT ASSEMBLY

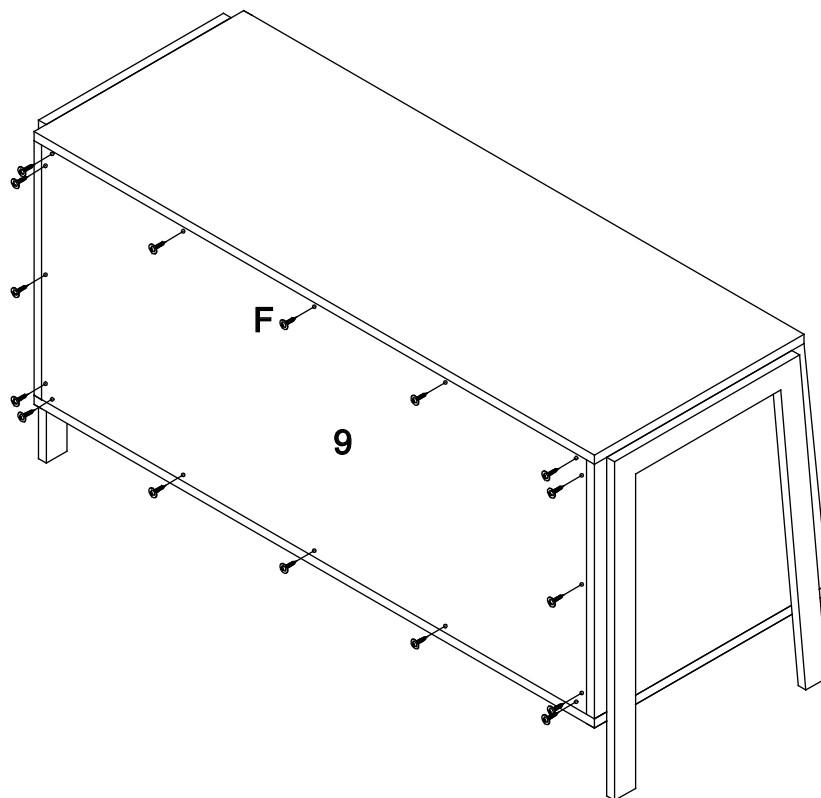Step 7

F**16 pcs**

Attach Back Panel (9) with Screw (F).

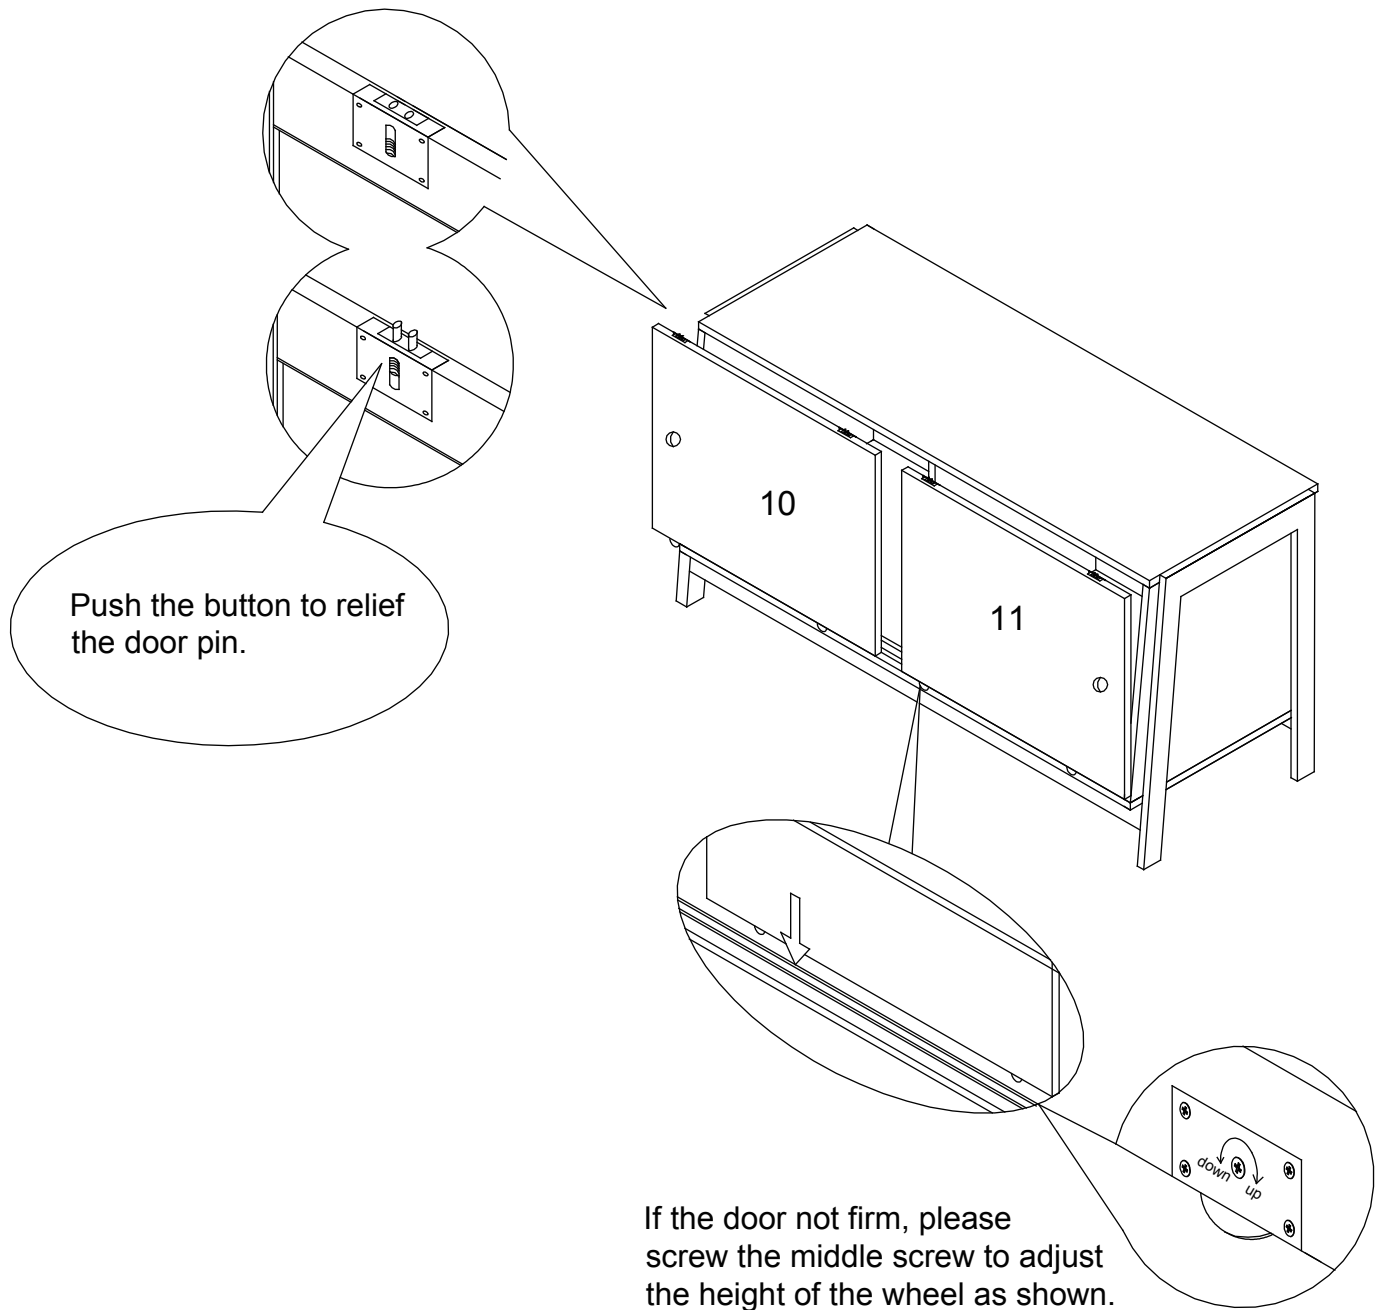Step 7



Insert sliding door (10 & 11) to assembled unit as shown.

Important: If the door not firm, please screw the middle screw to adjust the height of wheel as shown.



TIPS:

Your suggestions and comments for Costway are really important to us!
We sincerely solicit you to go back to our shop and leave a good rating in just a simple click. It would be quite encouraging if you could kindly do so like below:

★★★★★ Great products so far

February 24, 2018

Great product so far. Fast delivery, easy setup, and working without any issues.

With your inspiring rating, Costway will be more consistent to offer you
EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

US office:Fontana

UK office:Ipswich

