

EN

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

DE

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

FR

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

ES

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

IT

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

PL

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

US office: Fontana **UK** office: Ipswich **AU** office: Truganina
DE office: Hamburg **FR** office: Saint Vigor d'Ymonville **PL** office: Gdańsk

**USER'S MANUAL**

Hitch Mount Bike Rack AW10011BK

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

COSTWAY


Assembly Instruction

1. Unpack the contents of your bike carrier and lay the parts out on a flat surface.


2. Plug the pipe plug into the corresponding iron pipe as shown in the figure. For the pipe plug containing nut, pay attention to the orientation of the nut (The nut faces the perforated side).



3. Combining the two plastic parts, insert them into the U-shaped groove of the frame support arm and the wheel tray, insert screws into the holes on one side, and install the knob.

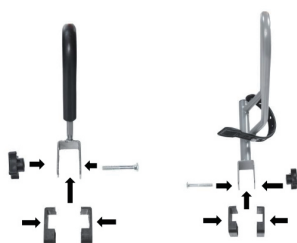


4. Unfold the two outer arms of the tray rack and install the black safety pins through each of the three holes on the main bracket. (Fig. 1)

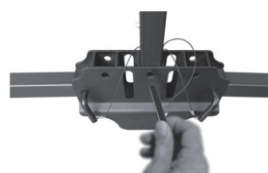**FIG. 1**


5. Insert hitch tongue into rack base (Fig. 2). Install the two hex head mounting bolts into the bottom of the rack base and fully tighten (Fig. 3).

FIG. 2**FIG. 3**

6. Slide the wheel trays onto the beam making sure to alternate one pair to the left and one pair to the right of each other to allow for adjustment for individual bike wheel bases. (Fig. 4)

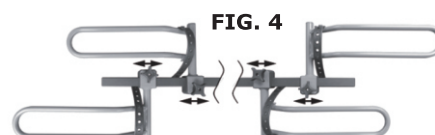**FIG. 4**


7. Rack comes ready to install into a 2" hitch receiver. For 1" receivers use the supplied hex wrench to unscrew the fixing bolt (Fig. 5) and remove the spacers (Fig. 6).

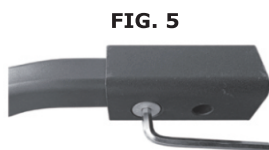

8. Install rack onto vehicle by sliding the tongue into the hitch receiver. Insert hitch bolt into receiver and tongue and tighten securely (Fig. 7). Insert lock pin through hole on other side of hitch bolt (Fig. 8).



9. Locate the two frame support arms. These arms slide down the central upright beam of the tray rack and secure the frame of the bicycle to the rack. Notice that one arm is longer than the other. This allows you to accommodate different sizes and styles of frames. To raise the arms up and away from the frame or remove them from the central beam, loosen the lock knob on the side of the arm bracket to release the arm from the central beam.

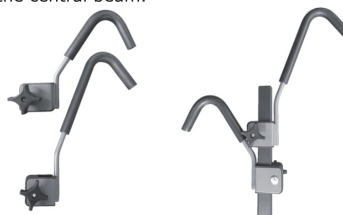

10. Adjust the wheel tray locations to match the wheelbase of your bikes:

- Be sure to tighten the thumb knobs on each wheel tray to prevent them from moving out of place or vibrating off while driving.

- Load the bikes onto the rack with the handlebars facing in opposite directions from each other to avoid interference between the bikes.
- Lower the frame support arms onto the frame of each bike so that the bike is secure on the rack.
- Use the rubber straps on each wheel tray to secure each bike wheel to the tray.

