

EN

With your inspiring rating, COSTWAY will be more consistent to offer you EASY SHOPPING EXPERIENCE, GOOD PRODUCTS and EFFICIENT SERVICE!

DE

Mit Ihrer inspirierenden Bewertung wird COSTWAY konsistenter sein, um Ihnen EIN SCHÖNES EINKAUFSERLEBNIS, GUTE PRODUKTE und EFFIZIENTEN SERVICE zu bieten!

FR

Avec votre évaluation inspirante, COSTWAY continuera à fournir une EXPÉRIENCE D'ACHAT PRATIQUE, des PRODUITS DE QUALITÉ et un SERVICE EFFICACE !

ES

Con su calificación inspiradora, COSTWAY será más consistente para ofrecerle EXPERIENCIA DE COMPRA FÁCIL, BUENOS PRODUCTOS y SERVICIO EFICIENTE.

IT

Con la tua valutazione incoraggiante, COSTWAY sarà più coerente per offrirti ESPERIENZA DI ACQUISTO FACILE, BUONI PRODOTTI e SERVIZIO EFFICIENTE!

PL

Dzięki twojej opinii COSTWAY będzie mógł oferować jeszcze WYGODNIEJSZE ZAKUPY, LEPSZE PRODUKTY i SPRAWNIEJSZĄ OBSŁUGĘ KLIENTA.

US office: Fontana


UK office: Ipswich

AU office: Truganina

DE office: Hamburg

FR office: Saint Vigor d'Ymonville

PL office: Gdańsk

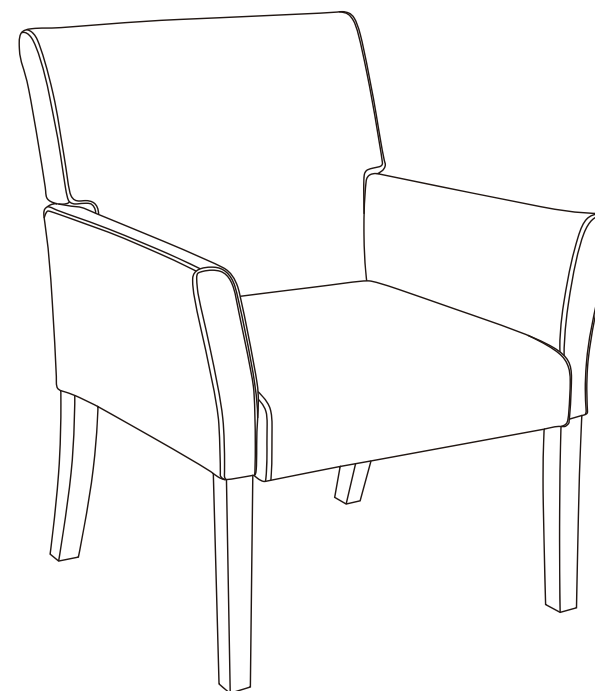


USER'S MANUAL


Guest Chair **HW65741/HW65743/HV10037**

PRODUCT ASSEMBLY


① Back Cushion
x1



② Seat Cushion
x1




③ 60mm Screws
x8




④ Spring Washers
x8




⑤ Flat Washers
x8



⑥ Right Arm
x1



⑦ Left Arm
x1



⑧ Hexagonal Wrench
x1



ATTENTION:

Make certain to fully tighten all screws before using chair.

WE SUGGEST TAPING THE WRENCH UNDER THE SEAT FOR FUTURE USE.

INSTRUCTIONS

A. Remove all parts from the carton and separate them into part number groups as indicated in the parts list.

B. Put the back cushion (1) flat on the floor. Align the seat cushion (2) over the back cushion (1) as shown and connect with flat washers (5), spring washers (4) and 60mm screws (3). Do not tighten screws fully until you have completed assembly. Peel back velcro flaps covering the back and seat bottom to access frame and screw holes.

c. Insert the wood dowel of the back cushion (1) to the right arm (6) hole. Then connect the back cushion (1) and the right arm (6) with flat washers (5), spring washers (4) and 60mm screws (3). Then assemble the left arm (7). Do not tighten screws fully until you have completed assembly. Place chair upright on level floor. Make any necessary adjustments to frame to ensure chair sits flat on floor without rocking, then tighten all screws securely. Attach the flap to the velcro on the bottom. Save the wrench and tape underneath the seat for future use.

D. Periodically (every 90 days) make sure that the screws are still fully tightened.

