

## **USER'S MANUAL**

### **Foot Stamping Sealing Machine**

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

**1. USAGE:**

This impulse sealer adopt electric impulse technology. The sealing time can vary from 2-4 sec to 0.2-2 sec. It's a king of sealing equipment of little investment. Long sealing length. Simple operation, and beneficial. It can be used in the area of food stuff, medicine, local specialty, electric spare parts, factory, store and so on.

**2. DIRECTION:**

Please assemble the machine according to the assembly diagram, tighten the screws of the pedal pulling rod, plug into 220V-240V. Power, turn on the power switch, then start to seal, adjust the timer. According to the thickness of the film. Press down the pedal. When the green indicator light is on, the machine is heating, when the green indicator is out, the sealing procedure is finished.

**3. ATTENTION:**


The machine belongs to the electronic machinery, pay attention to damp and power source (220V-240V), connect the ground wire, don't put inflammable cargo for packaging in the machines.

**4. SPDCFICATION:**

Model	300	400	500	600	700	800	1000	1200	1400
Power(w)	350	450	600	750	800	850	1000	1100	1250
Sealing Length(mm)	300	400	500	600	700	800	1000	1200	1400
Heating time (Sec)	0.2-3								
Weight(Kg)	7.2	7.5	8.8	10	11	15.5	17	18.5	21.5

**5. FRAME**

1. Control board
2. Heating wire, silicon piece
3. Working plate
4. Pedal frame
5. Pedal board

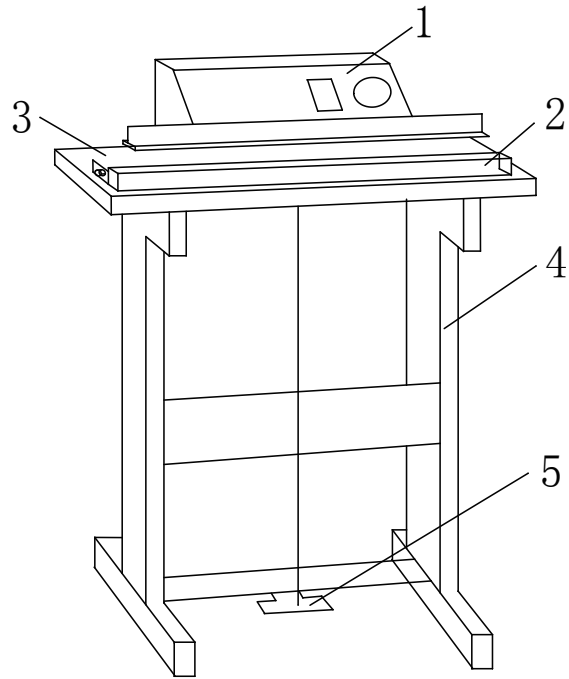

## 6. PACKING LIST

NO	Name	Quantity	
1	Machine head	1pc	
2	“I” Standing frame	2pc	Right and left
3	Middle cross frame	1pc	
4	Pedal cross board	1pc	
5	Pedal connecting rod	1pc	
6	Pedal board	1pc	
7	Screws	1bag	
8	Operation manual	1pc	
9	Spare parts	1bag	